

# SyncMaster

SERIES **3** | TA350

SERIES **5** | TA550

# LED TV MONITOR

(MFM TV)

## user manual


imagine the possibilities

Thank you for purchasing this Samsung product.  
To receive more complete service, please register  
your product at  
[www.samsung.com/register](http://www.samsung.com/register)



Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

### Digital TV notice

1. Functionalities related to Digital TV (DVB) are only available in countries/areas where DVB-T (MPEG2 and MPEG4 AVC) digital terrestrial signals are broadcasted or where you are able to access to a compatible DVB-C (MPEG2 and MPEG4 AAC) cable-TV service. Please check with your local dealer the possibility to receive DVB-T or DVB-C signal.
2. DVB-T is the DVB European consortium standard for the broadcast transmission of digital terrestrial television and DVB-C is that for the broadcast transmission of digital TV over cable.
3. Although this TV set meets the latest DVB-T and DVB-C standards, as of [August, 2008], the compatibility with future DVB-T digital terrestrial and DVB-C digital cable broadcasts cannot be guaranteed.
4. Depending on the countries/areas where this TV set is used some cable-TV providers may charge an additional fee for such a service and you may be required to agree to terms and conditions of their business.
5. Some Digital TV functions might be unavailable in some countries or regions and DVB-C might not work correctly with some cable service providers.
6. For more information, please contact your local Samsung customer care centre.  
 The reception quality of TV may be affected due to differences in broadcasting method between the countries. Please check the TV performance in the local SAMSUNG Authorized Dealer, or the Samsung Call Centre whether it can be improved by reconfiguring TV setting or not.



### Still image warning

Avoid displaying still images (like jpeg picture files) or still image element (like TV programme logo, panorama or 4:3 image format, stock or news bar at screen bottom etc.) on the screen. Constant displaying of still picture can cause ghosting of screen, which will affect image quality. To reduce risk of this effect, please follow below recommendations:


- Avoid displaying the same TV channel for long periods.
- Always try to display any image on full screen, use TV set picture format menu for best possible match.
- Reduce brightness and contrast values to minimum required to achieve desired picture quality, exceeded values may speed up the burnout process.
- Frequently use all TV features designed to reduce image retention and screen burnout, refer to proper user manual section for details.

### Securing the Installation Space


Keep the required distances between the product and other objects (e.g. walls) to ensure proper ventilation. Failing to do so may result in fire or a problem with the product due to an increase in the internal temperature of the product.

-  The actual appearance of the TV may differ from the images in this manual, depending on the model.
-  Be careful when you touch the TV. Some parts can be somewhat hot.

#### Installation with a stand.

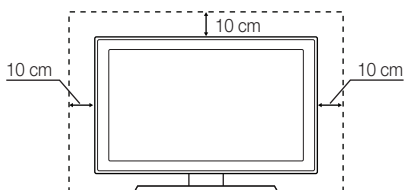

#### Installation with a wall-mount.

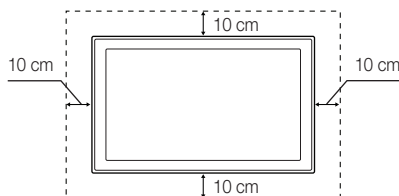

- An administration fee may be charged if either
  - (a) an engineer is called out at your request and there is no defect in the product (i.e. where you have failed to read this user manual).
  - (b) you bring the unit to a repair centre and there is no defect in the product (i.e. where you have failed to read this user manual).
- The amount of such administration charge will be advised to you before any work or home visit is carried out.

# Contents

## Getting Started

4

- 4 Safety Precautions
- 11 Accessories
- 12 Installing the Stand
- 13 Viewing the Control Panel
- 14 Viewing the Remote Control

## Connections

15

- 15 Connecting to an Antenna
- 15 Plug & Play (Initial Setup)
- 16 Connecting to an AV Device
- 18 Connecting to a COMMON INTERFACE slot
- 19 Connecting to an Audio Device
- 20 Connecting to a PC
- 21 Changing the Input Source

## Basic Features

21

- 21 How to Navigate Menus
- 22 Using the **INFO** button (Now & Next guide)
- 22 Using the Channel Menu
- 24 Channel Menu
- 25 Picture Menu
- 29 Sound Menu
- 30 System Menu
- 34 Support Menu

## Advanced Features

36

- 36 Using the My Downloads
- 41 Anynet+ (HDMI-CEC)

## Other Information

45

- 45 Installing the Device Driver
- 46 Analogue Channel Teletext Feature
- 47 Attaching a Wall Mount/Desktop Stand
- 48 Assembling the Cables
- 48 Anti-theft Kensington Lock
- 49 Troubleshooting
- 53 Specifications
- 54 Index

### Check the Symbol!

**TOOLS** 



This function can be used by pressing the **TOOLS** button on the remote control.



Note



Step by Step Guide

# Getting Started

## Safety Precautions

### Icons used for safety precautions



#### WARNING

Failing to follow the precautions marked with this sign may result in a serious injury or even a fatality.



#### CAUTION

Failing to follow the precautions marked with this sign may result in a personal injury or property damage.



Do not perform.



Must be followed.

#### CAUTION

##### RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.



This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.




This symbol alerts you that important literature concerning operation and maintenance has been included with this product.

## Power Related

 The following images are for your reference and may differ depending on models and countries.




### Warning

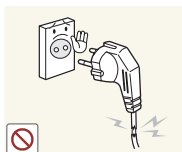

Avoid using a damaged power cord or plug or a loose power outlet.

- Otherwise, it may result in electric shock or fire.

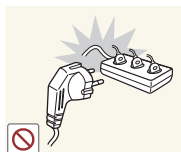


Avoid connecting multiple electric appliances to a single wall outlet.

- Otherwise, it may result in fire due to overheating of the wall outlet.




Avoid plugging in or unplugging the power supply with wet hands.

- Otherwise, it may result in electric shock.

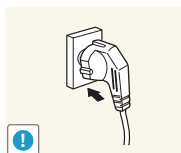


Plug the power plug in firmly.

- Otherwise, it may result in fire.

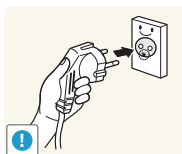

Make sure to connect the power cord to a grounded wall outlet (for insulation class 1 equipment only).

- Otherwise, it may result in electric shock or injury.

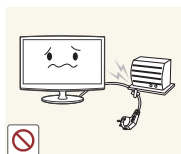


Avoid bending or twisting the power cord excessively and avoid placing heavy objects on the cord.

- Otherwise, it may result in electric shock or fire due to a damaged power cord.




# Getting Started

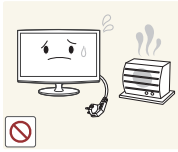

Keep the power cord and the product away from a heater.

- Otherwise, it may result in electric shock or fire.

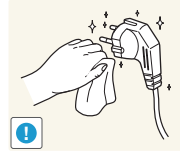

If the pins of the power plug or the wall outlet are covered in dust, clean it using a dry cloth.


- Otherwise, it may result in fire.

## Caution




Avoid unplugging the power plug while the product is operating.

- Otherwise, it may damage the product due to electric shock.

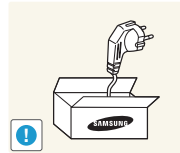


Make sure to use only the power cord supplied by our company. In addition, do not use the power cord of another electric appliance.

- Otherwise, it may result in electric shock or fire.

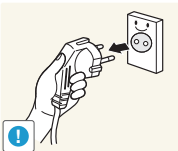

When unplugging the power plug from the wall outlet, make sure to hold it by the plug and not by the cord.

- Otherwise, it may result in electric shock or fire.

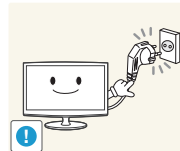


Connect the power plug to a wall outlet that can be easily reached.

- When a problem occurs with the product, you must unplug the power plug to cut the power off completely. You cannot cut the power off completely using only the power button on the product.


## Installation Related

### Warning

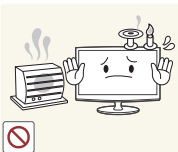

Avoid placing burning candles, mosquito repellent or cigarettes on the product.

- Otherwise, it may result in fire.

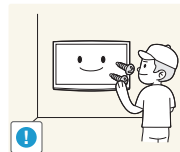


Ask an installation engineer or relevant company to install the product onto the wall.

- Otherwise, it may result in injury.
- Make sure to use the specified wall mount.




Avoid installing the product in a badly-ventilated location such as inside a bookshelf or closet.

- Otherwise, it may result in fire due to internal over-heating.

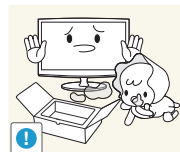


Keep the plastic bags used to pack the product away from children.

- If children place the plastic bags over their heads, they may suffocate.

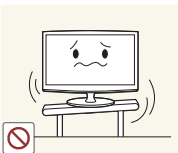

Avoid installing the product in a location that is unstable or exposed to excessive vibration such as on an unstable or slanted shelf.

- The product may fall and this may result in damage to the product or injury.
- If you use the product in a location exposed to excessive vibrations, it may result in a problem with the product or fire.

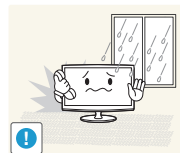

Avoid installing the product in a location exposed to dust, moisture (sauna), oil, smoke or water (rain drops) and installing it within a vehicle.

- This may result in electric shock or fire.

# Getting Started



Avoid installing the product in a location exposed to direct sunlight and installing the product near a heat source such as a fireplace or heater.

- This may shorten the product life cycle or cause fire.




Avoid installing the product where children may reach it.

- If a child touches the product, the product may fall and this may result in injury.
- Since the front part is heavier, install the product on a flat and stable surface.



Bend the outdoor antenna cable downwards at the location where it comes in the house so that rainwater does not flow in.


- If rainwater enters the product, it may result in electric shock or fire.

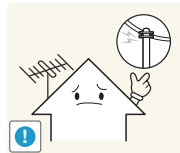

Install the antenna far away from any high voltage cables.


- If the antenna touches or falls onto a high voltage cable, it may result in electric shock or fire.

## Caution

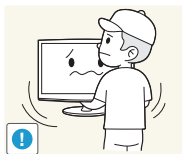


Do not let the product drop while moving it.

- This may result in a problem with the product or injury.

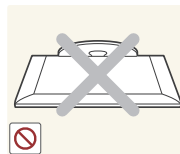


Do not place the product face down on the floor.

- This may damage the panel of the product.

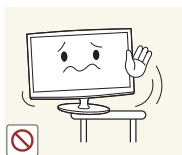

When installing the product on a console or shelf, make sure that the front of the product does not protrude out of the console or shelf.

- Otherwise, this may cause the product to fall off and result in a malfunction or injury.
- Make sure to use a cabinet or shelf suitable to the size of the product.

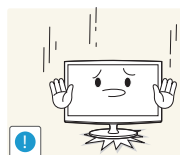

When putting the product down, handle it gently.

- Otherwise, it may result in a problem with the product or injury.




If the product is installed in a location where the operating conditions vary considerably, a serious quality problem may occur due to the surrounding environment. In this case, install the product only after consulting one of our service engineers about the matter.

- Places exposed to microscopic dust, chemicals, too high or low temperature, high humidity, airports or stations where the product is continuously used.

# Getting Started


## Cleaning Related

### Warning

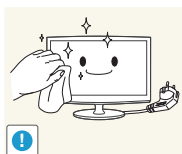

Before cleaning the product, unplug the power cord.

- Otherwise, it may result in electric shock or fire.

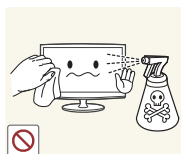

When cleaning the product, do not spray water directly over the product parts.


- Make sure that water does not enter the product.
- Otherwise, it may result in fire, electric shock or a problem with the product.

### Caution



Avoid spraying cleansing agent directly onto the product.


- This may result in discoloration or cracking of the exterior of the product or the panel coming off.

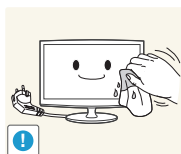

When cleaning the product, disconnect the power cord and clean the product with the supplied cleaning cloth.


- Avoid using chemicals such as wax, benzene, alcohol, thinner, mosquito repellent, fragrance, lubrication or cleansing agent when cleaning the product.

This may result in the exterior being deformed or the print being removed.

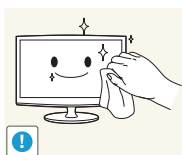

If you can't get the product clean with just the supplied cloth, use a soft, damp cloth with a "monitor-exclusive cleansing agent" and wipe the product with it.

- If no monitor-exclusive cleansing agent is available, dilute a cleansing agent with water at a ratio of 1:10 before cleaning the product.

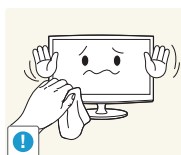

Since the exterior of the product is easily scratched, be sure to use the supplied cleansing cloth.

## Usage Related

### Warning



Since a high voltage runs through the product, never disassemble, repair or modify the product yourself.


- Otherwise, it may result in fire or electric shock.
- If the product needs to be fixed, contact a service centre.



To move the product, turn the power off and unplug the power cord, the antenna cable and any other wires connected to the product.


- Otherwise, it may result in electric shock or fire due to the damaged power cord.

# Getting Started

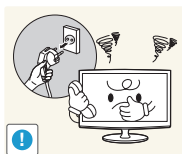


If the product generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact a service centre.

- Otherwise, it may result in electric shock or fire.

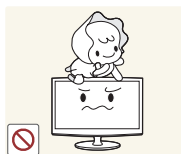


Avoid letting children hang or climb onto the product.

- Otherwise, it may result in the product falling and this may result in injury or death.

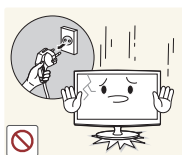


If you drop the product or the case is damaged, turn the power off and unplug the power cord. Contact a service centre.

- Otherwise, it may result in fire or electric shock.

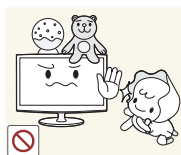


Avoid placing objects such as toys and cookies on top of the product.

- If a child hangs over the product to grab an object, the object or the product may fall and this may result in injury or even death.

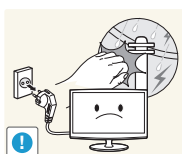

When thunder or lighting occurs, unplug the power cord and under no circumstance touch the antenna cable as this is dangerous.

- Otherwise, it may result in electric shock or fire.

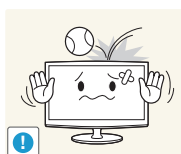


Avoid dropping an object over the product or cause impact to the product.

- Otherwise, it may result in electric shock or fire.




Avoid moving the product by pulling the power cord or antenna cable.

- Otherwise, it may result in electric shock, fire or a problem with the product due to damage to the cable.

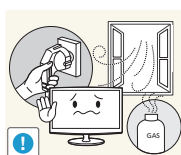


When a gas leak occurs, do not touch the product or the power plug and ventilate immediately.

- A spark may result in an explosion or fire.
- During a thunder or lighting storm, do not touch the power cord or antenna cable.

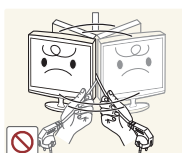


Avoid lifting up or moving the product by holding only the power cord or signal cable.

- Otherwise, it may result in electric shock, fire or a problem with the product due to damage to the cable.

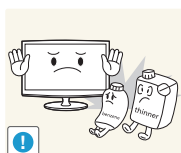

Avoid using or placing inflammable spray or objects near the product.

- This may result in an explosion or fire.

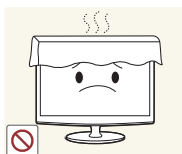

Take care not to block the vent by a table cloth or curtain.


- Otherwise, it may result in fire due to internal overheating.



Avoid inserting metal objects such as a chopsticks, coins or hairpins, or inflammable objects into the product (the vents, ports, etc).

- If water or substances enters the product, turn the power off, unplug the power cord and contact a service centre.
- Otherwise, it may result in a problem with the product, electric shock or fire.

# Getting Started

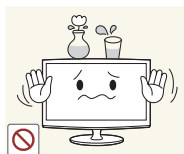


Avoid placing a liquid container such as a vase, flowerpot, beverage, cosmetics or drugs, or a metal object over the product.

- If water or substances enter the product, turn the power off, unplug the power cord and contact a service centre.
- Otherwise, it may result in a problem with the product, electric shock or fire.




Do not press down hard on the product. The product may become deformed or damaged.

## Caution

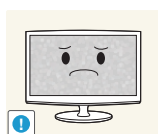


Displaying a still image for a long time may create a persistent image or stain on the screen.

- If you do not use the product for a long time, use the power-saving mode or set the screensaver to the moving picture mode.

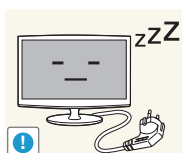


When not using the product for a long time such as leaving your home, unplug the power cord from the wall outlet.

- Otherwise, it may cause dust accumulation and result in fire caused by overheating or short circuit or result in an electric shock.

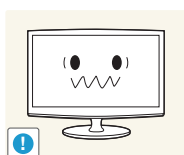


Set the appropriate resolution and frequency for the product.

- Otherwise, it may result in eye strain.

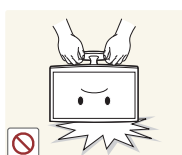

Avoid turning the product upside down or move the product holding only the stand.

- This may cause the product to fall, resulting in damage to the product or injury.

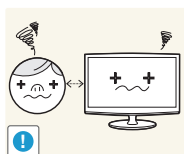


Watching the product from too close a distance continuously may damage your eyesight.




Avoid using a humidifier or cooker near the product.

- Otherwise, it may result in electric shock or fire.

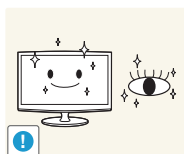


It is important to give your eyes some rest (5 minutes every hour) when viewing the product screen for long periods of time.

- This will alleviate any eye strain.

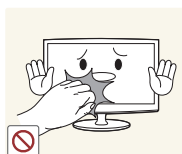


Since the display panel is hot after using it for a long time, do not touch the product.

# Getting Started

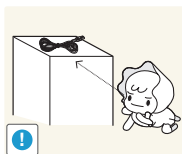


Keep the small accessories in a location out of the reach of children.

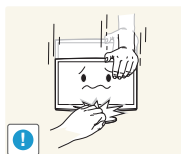


Take care when adjusting the angle of the product or the height of the stand.

- If your hand or finger is caught, you may be injured.
- If the product is tilted excessively, the product may fall and this may result in injury.

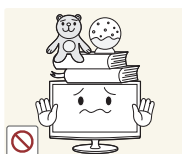

Avoid placing a heavy object over the product.

- Otherwise, it may result in a problem with the product or injury.

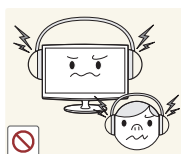


When using headphones or earphones, do not turn the volume too high.

- Having the sound too loud may damage your hearing.




Be careful that children do not place the batteries in their mouths when removed from the remote control. Place the battery in a location that children or infants cannot reach.

- If children have had the battery in their mouths, consult your doctor immediately.

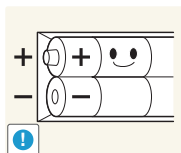


When replacing the batteries, insert them with right polarity (+, -).

- Otherwise, the battery may become damaged or it may cause fire, personal injury or damage due to leakage of the internal liquid.

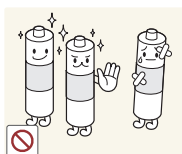

Use only specified standard batteries. Do not use new and used batteries together.

- This may cause a battery to break or leak and may cause fire, injury, or contamination (damage).

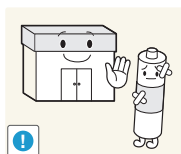

The batteries (and rechargeable batteries) are not ordinary refuse and must be returned for recycling purposes. The customer is responsible for returning the used or rechargeable batteries for recycling.

- The customer can return used or rechargeable batteries to a nearby public recycling centre or to a store selling the same type of the battery or rechargeable battery.


# Getting Started
 
## Accessories

- ✎ Please make sure the following items are included with your TV. If any items are missing, contact your dealer.
- ✎ The items' colours and shapes may vary depending on the models.
- ✎ Cables not included in the package contents can be purchased separately.
- ✎ Check that there is no accessory hidden behind packing materials when you open the box.

⚠ **CAUTION: INSERT SECURELY LEST SHOULD BE DETACHED IN SET**

- Remote Control & Batteries (AAA x 2)
- Warranty Card / Safety Guide (Not available in some locations)
- Cleaning Cloth
- Power Cord



• User Manual



• Quick Setup Guide



• D-sub Cable



• Stereo Cable




• AV / Component Adapter



• SCART Adapter




• Cable Holder

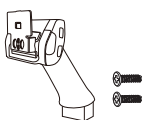

• Stand Connector / Screws (2ea)




 • Stand Base



• CI Card Adapter

 - ✎ For best cable connection to this product, be sure to use cables with a maximum thickness as below:




- Maximum thickness - 0.55 inches (14mm)


# Getting Started

## Installing the Stand


-  Before assembling the product, place the product down on a flat and stable surface so that the screen is facing downwards.

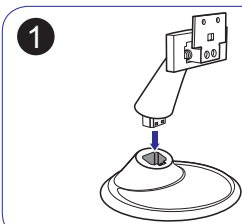


Insert the Stand Connector into the Stand in the direction shown by the figure.

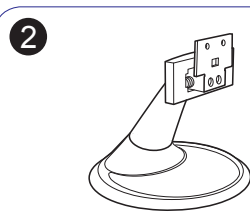


Check if the Stand Connector is firmly connected.

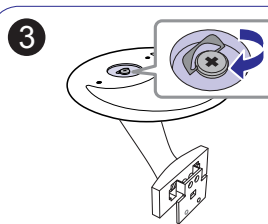


Turn the connecting screw at the bottom of the stand fully so that it is completely fixed.

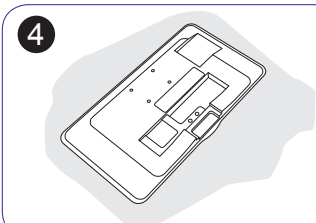

Place a soft cloth over the table to protect the product and place the product onto the cloth so that the front of the product is facing downwards.

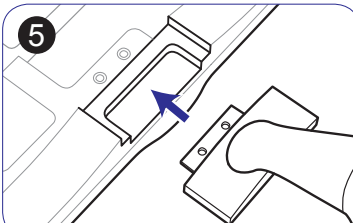


Push the assembled stand into the main body in the direction of the arrow as shown in the figure.

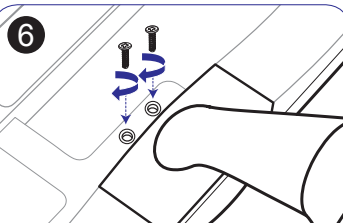


Firmly fasten the stand using the screws.


- Caution

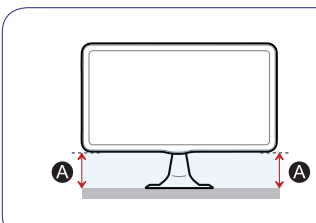


If the height of "A" on one side is different from the other side, unfasten the screws, adjust the heights, and re-assemble.

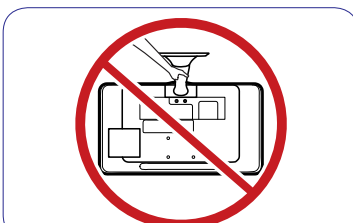

Avoid lifting the product holding only the stand.


-  The cleaning cloth is supplied with black high-glossy models only.


-  The colour and the appearance may differ depending on the product, and the specifications are subject to change without prior notice to improve the performance.


 




# Getting Started

## Viewing the Control Panel

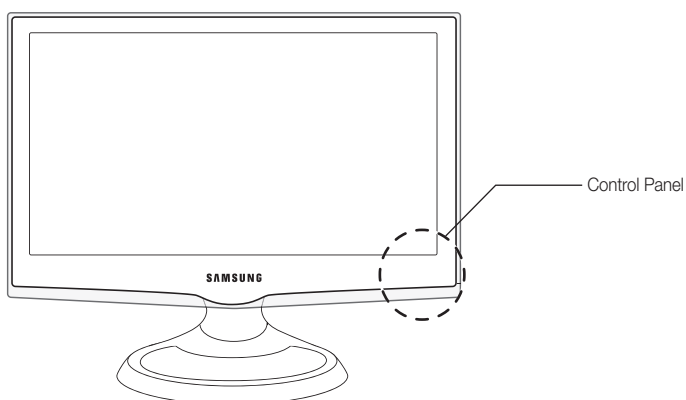 The product colour and shape may vary depending on the model.




|  |  |
|--|--|
| Power Indicator  | Blinks and turns off when the power is on and lights up in standby mode.   |
| Remote control sensor  | Aim the remote control towards this spot on the TV.  |
| SOURCE  | Toggles between all the available input sources. In the on-screen menu, use this button as you would use the ENTER  button on the remote control. |
| MENU   | Displays an on-screen menu, the OSD (on screen display) of your TV's features.   |
| -  +   | Adjusts the volume. In the OSD, use the -  + buttons as you would use the ◀ and ▶ buttons on the remote control.                                 |
| ▼ CH ▲   | Changes the channels. In the OSD, use the ▼ CH ▲ buttons as you would use the ▼ and ▲ buttons on the remote control.   |
| ⏻ (Power)  | Turns the TV on or off.  |
| Speakers   | -  |


### Standby mode

Do not leave your TV in standby mode for long periods of time (when you are away on a holiday, for example). A small amount of electric power is still consumed even when the power button is turned off. It is best to unplug the power cord.


# Getting Started

## Viewing the Remote Control

 This is a special remote control for the visually impaired persons and has Braille points on the Power, Channel and Volume buttons.

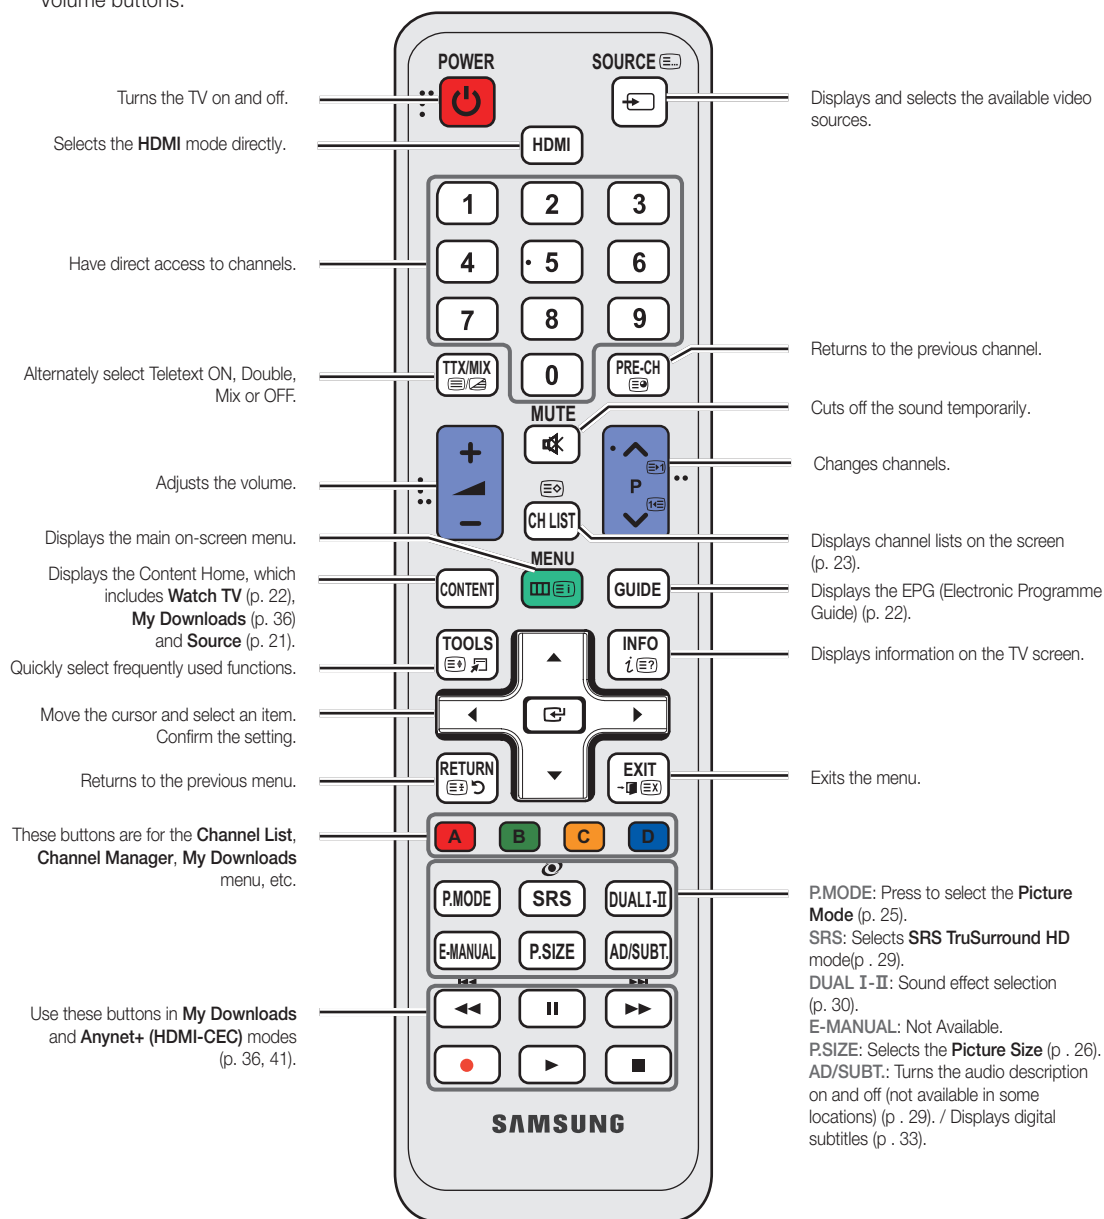

## Installing batteries (Battery size: AAA)

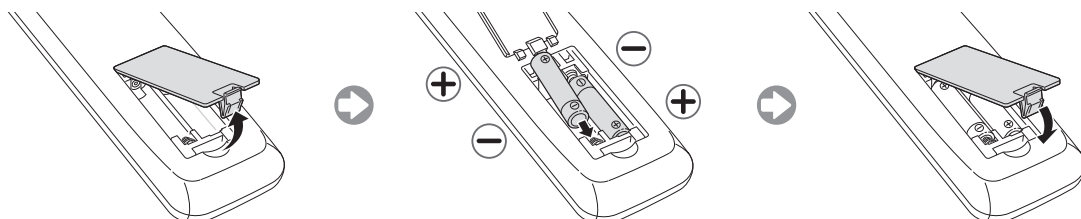


# Connections

## Connecting to an Antenna

When the TV is initially powered on, basic settings proceed automatically.

Preset: Connecting the mains and antenna.

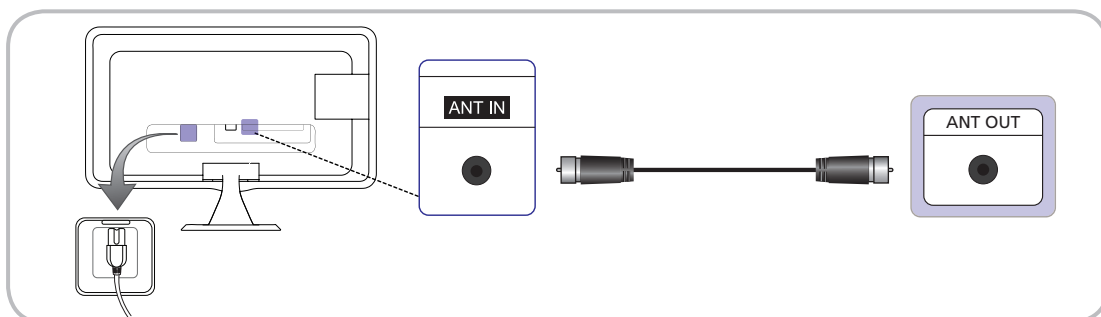

## Plug & Play (Initial Setup)

When the TV is initially powered on, a sequence of on-screen prompts will assist in configuring basic settings. Press the **POWER** button. **Plug & Play** is available only when the Input **Source** is set to **TV**.

Before turning on the TV, make sure the antenna cable is connected.

To return to the previous step, press the Red button.

|   |  |   |
|---|--|---|
| 1 | Selecting a language                           | Press the ▲ or ▼ button, then press the <b>ENTER</b> button. Select the desired OSD (On Screen Display) language.   |
| 2 | Selecting <b>Store Demo</b> or <b>Home Use</b> | Press the ◀ or ▶ button, then press the <b>ENTER</b> button. <ul style="list-style-type: none"> <li>Select the <b>Home Use</b> mode. <b>Store Demo</b> Mode is for retail environments.</li> <li>To return the unit's settings from <b>Store Demo</b> to <b>Home Use</b> (standard): Press the volume button on the TV. When you see the volume OSD, press and hold <b>MENU</b> for 5 sec.</li> <li><b>Store Demo</b> is only for shop display. If you select it, several functions are not able to use. Please select <b>Home Use</b> when you watch at home.</li> </ul> |
| 3 | Selecting a country                            | Press the ▲ or ▼ button, then press the <b>ENTER</b> button. Select the appropriate country. <p> After selecting the country in the <b>Country</b> menu, some models may proceed with an additional option to setup the pin number. When you input the PIN number, "0-0-0-0" is not available.</p>  |
| 4 | Setting the <b>Clock Mode</b>                  | Set the <b>Clock Mode</b> automatically or manually.  |
| 5 | Selecting an antenna                           | Press the ▲ or ▼ button, then press the <b>ENTER</b> button. Select the <b>Antenna</b> source to memorise.  |
| 6 | Selecting a channel                            | Press the ▲ or ▼ button, then press the <b>ENTER</b> button. Select the channel source to memorise. When setting the antenna source to <b>Cable</b> , a step appears allowing you to assign numerical values (channel frequencies) to the channels. For more information, refer to <b>Channel</b> → <b>Auto Tuning</b> (p. 24).   |
| 7 | Enjoy your TV.                                 | Press the <b>ENTER</b> button.  |

POWER



### If You Want to Reset This Feature...

Select **System - Plug & Play** (Initial Setup). Enter your 4 digit PIN number. The default PIN number is "0-0-0-0" (France: "1-1-1-1"). If you want to change the PIN number, use the **Change PIN** function. You should do **Plug & Play** (**MENU** → **System**) again at home although you did in shop.


If you forget the PIN code, press the remote control buttons in the following sequence in Standby mode, which resets the PIN to "0-0-0-0"(France: "1-1-1-1"): **POWER** (off) → **MUTE** → 8 → 2 → 4 → **POWER** (on).

# Connections

## Connecting to an AV Device

### Using an HDMI or an HDMI to DVI cable (up to 1080p)

Available devices: DVD, Blu-ray player, HD cable box, HD STB (Set-Top-Box) satellite receiver, VCR

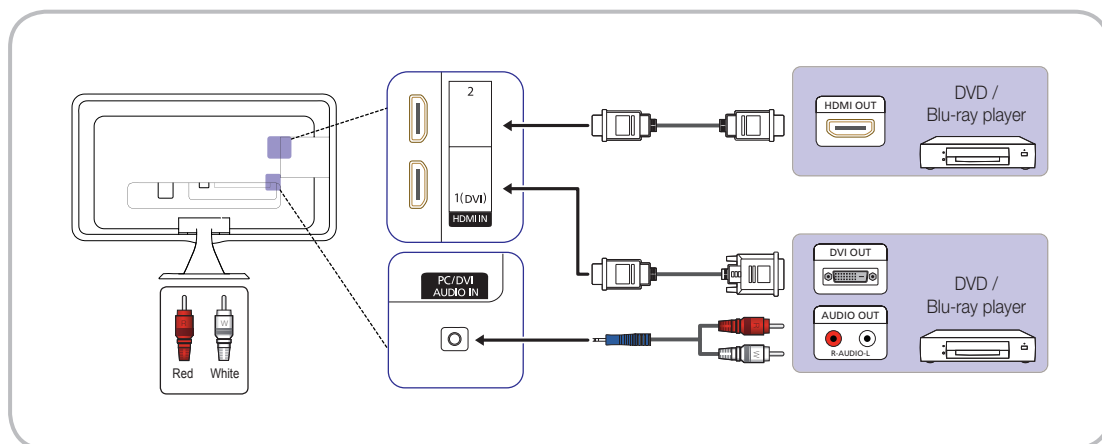


#### HDMI IN 1(DVI), 2 / PC/DVI AUDIO IN

- For better picture and audio quality, connect to a digital device using an HDMI cable.
- An HDMI cable supports digital video and audio signals, and does not require an audio cable.
  - To connect the TV to a digital device that does not support HDMI output, use an HDMI/DVI and audio cables.
- The picture may not display normally (if at all) or the audio may not work if an external device that uses an older version of HDMI mode is connected to the TV. If such a problem occurs, ask the manufacturer of the external device about the HDMI version and, if out of date, request an upgrade.
- Be sure to purchase a certified HDMI cable. Otherwise, the picture may not display or a connection error may occur.
- A basic high-speed HDMI cable or one with ethernet is recommended. This product does not support the ethernet function via HDMI.

# Connections

## Using a Component (up to 1080p) or an Audio/Video (480i only) and a Scart Cable

Available devices: DVD, Blu-ray player, HD cable box, HD STB (Set-Top-Box) satellite receiver, VCR

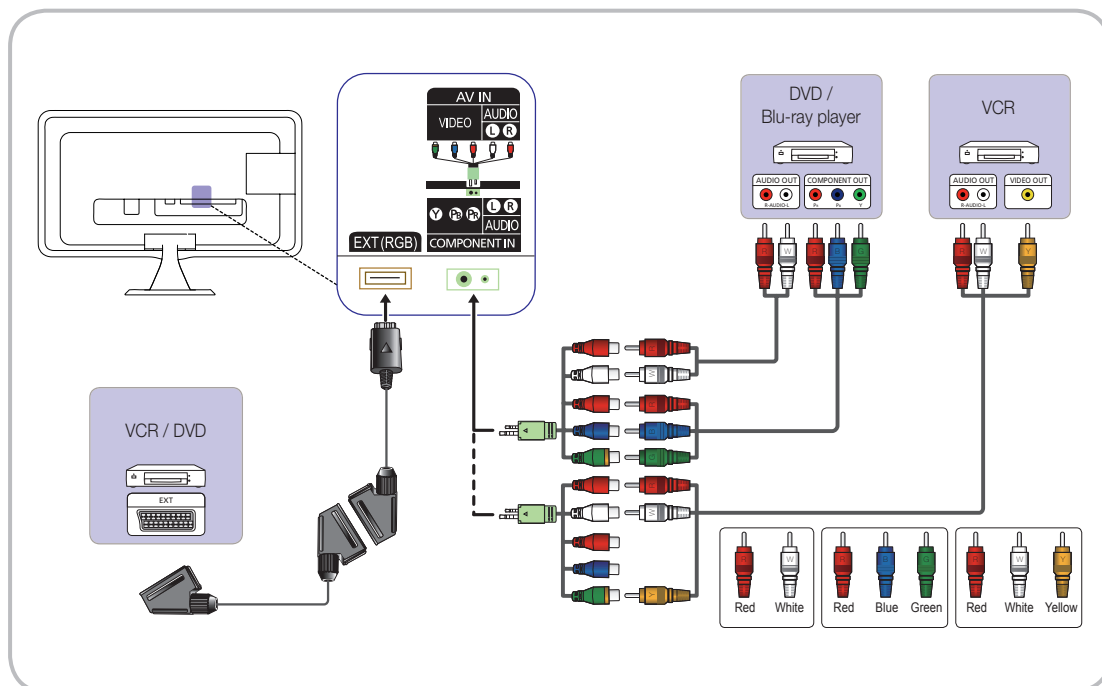

- In **Ext.** mode, DTV Out supports MPEG SD Video and Audio only.
- When connecting to **AV IN**, the colour of the **AV IN [VIDEO]** jack (green) will not match the video cable (yellow).
- To obtain the best picture quality, the Component connection is recommended over the A/V connection.

# Connections


## Connecting to a COMMON INTERFACE slot

### Attaching the CI Card Adapter

Attach the adapter as shown below.

To connect the CI CARD Adapter, follow these steps.

1. We recommend attaching the adapter before installing the wall mount, or inserting the "CI or CI+ CARD."
1. Insert the CI CARD Adapter into the two holes on the product ①.
  - Please find a two holes on the rear of the TV. A two holes is beside the **COMMON INTERFACE** port.
2. Connect the CI CARD Adapter into the **COMMON INTERFACE** port on the product ②.
3. Insert the "CI or CI+ CARD".

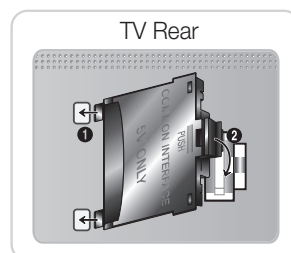

We recommend that you insert the CI card before you mount the TV on a wall.  
It may be difficult to insert after the mounting.  
Insert the card after attaching the CI CARD Adapter, on TV.  
It is difficult to attach the module if you insert the card before attaching.


### Using the "CI or CI+ CARD"

To watch paid channels, the "CI or CI+ CARD" must be inserted.

- If you don't insert the "CI or CI+ CARD," some channels will display the message "Scrambled Signal".
- The pairing information containing a telephone number, the "CI or CI+ CARD" ID the Host ID and other information will be displayed in about 2~3 minutes. If an error message is displayed, please contact your service provider.
- When the configuration of channel information has finished, the message "Updating Completed" is displayed, indicating the channel list is updated.

#### NOTE

- You must obtain a "CI or CI+ CARD" from a local cable service provider.
- When removing the "CI or CI+ CARD", carefully pull it out with your hands since dropping the "CI or CI+ CARD" may cause damage to it.
- Insert the "CI or CI+ CARD" in the direction marked on the card.
- The location of the **COMMON INTERFACE** slot may be different depending on the model.
- "CI or CI+ CARD" is not supported in some countries and regions; check with your authorized dealer.
- If you have any problems, please contact a service provider.
- Insert the "CI or CI+ CARD" that supports the current antenna settings. The screen will be distorted or will not be seen.

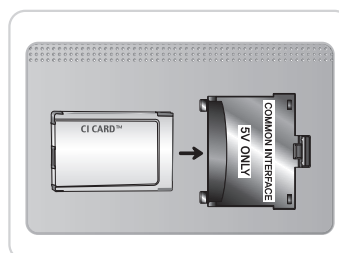


# Connections

## Connecting to an Audio Device



### Using an Optical (Digital) or a Headphone Connection

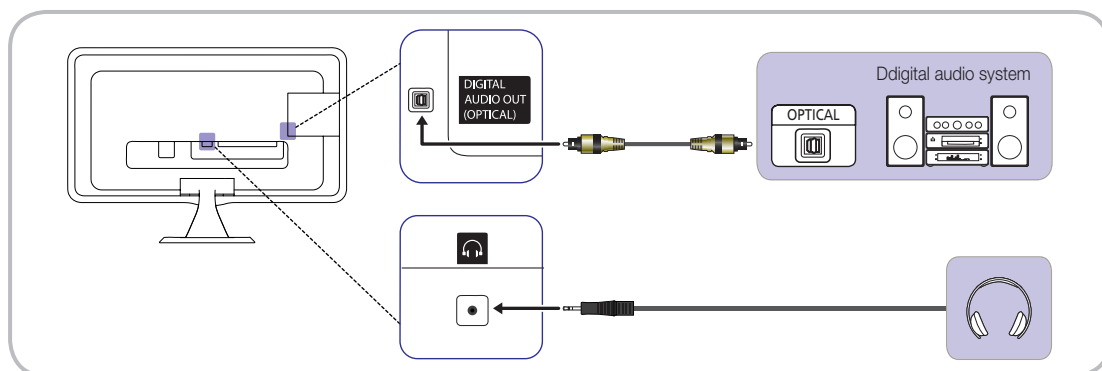Available devices: digital audio system, amplifier, DVD home theatre, PC



#### **DIGITAL AUDIO OUT (OPTICAL)**

- When a Digital Audio System is connected to the **DIGITAL AUDIO OUT (OPTICAL)** jack, decrease the volume of both the TV and the system.
- 5.1 CH (channel) audio is available when the TV is connected to an external device supporting 5.1 CH.
- When the receiver (home theatre) is set to on, you can hear sound output from the TV's optical jack. When the TV is receiving a DTV signal, the TV will send 5.1 CH sound to the home theatre receiver. When the source is a digital component such as a DVD / Blu-ray player / cable box / STB (Set-Top-Box) satellite receiver and is connected to the TV via HDMI, only 2 CH audio will be heard from the home theatre receiver. If you want to hear 5.1 CH audio, connect the digital audio out jack from your DVD / Blu-ray player / cable box / STB satellite receiver directly to an amplifier or home theatre.

 **Headphones** : You can connect your headphones to the headphones output on your set. While the headphones are connected, the sound from the built-in speakers will be disabled.


- Sound function may be restricted when connecting headphones to the TV.
- Headphone volume and TV volume are adjusted separately.

# Connections

## Connecting to a PC

### Using an HDMI cable or an HDMI to DVI cable or a D-sub cable

Connecting through the HDMI cable may not be supported depending on the PC.

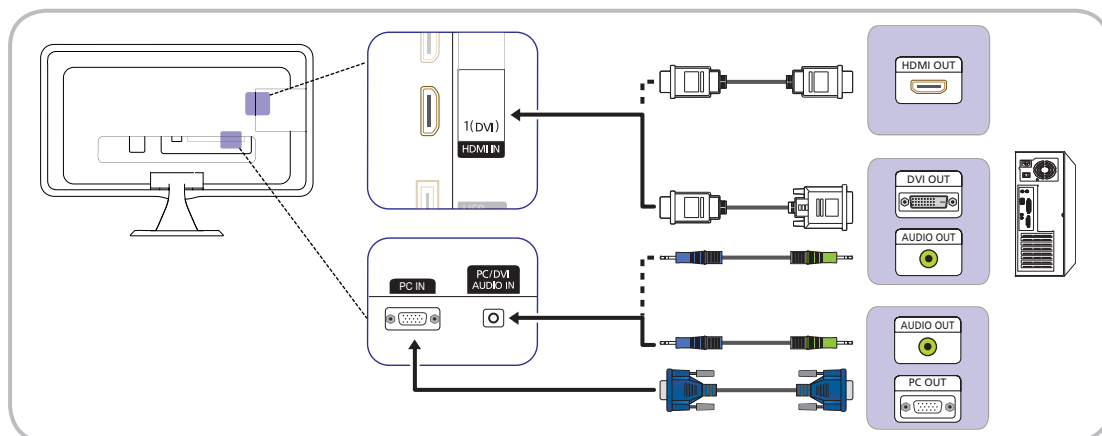

### Display Modes (D-Sub and an HDMI to DVI Input)

Optimal resolution : 19: 1360 X 768 pixels / 20: 1600 X 900 pixels / 22~27: 1920 X 1080 pixels

| Screen Size                            | Mode     | Resolution  |      | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Pixel Clock Frequency (MHz) | Sync Polarity (H / V) |
|--|----------|-------------|------|----------------------------|-------------------------|-----------------------------|-----------------------|
| 19"<br>20"<br>22"<br>23"<br>24"<br>27" | IBM      | 640 x 350   | 70Hz | 31.469                     | 70.086                  | 25.175                      | +/-                   |
|  |          | 720 x 400   | 70Hz | 31.469                     | 70.087                  | 28.322                      | -/+                   |
|  | MAC      | 640 x 480   | 67Hz | 35.000                     | 66.667                  | 30.240                      | -/-                   |
|  |          | 832 x 624   | 75Hz | 49.726                     | 74.551                  | 57.284                      | -/-                   |
|  | VESA DMT | 640 x 480   | 60Hz | 31.469                     | 59.940                  | 25.175                      | -/-                   |
|  |          | 640 x 480   | 72Hz | 37.861                     | 72.809                  | 31.500                      | -/-                   |
|  |          | 640 x 480   | 75Hz | 37.500                     | 75.000                  | 31.500                      | -/-                   |
|  |          | 800 x 600   | 56Hz | 35.156                     | 56.250                  | 36.000                      | +/+                   |
|  |          | 800 x 600   | 60Hz | 37.879                     | 60.317                  | 40.000                      | +/+                   |
|  |          | 800 x 600   | 72Hz | 48.077                     | 72.188                  | 50.000                      | +/+                   |
|  |          | 800 x 600   | 75Hz | 46.875                     | 75.000                  | 49.500                      | +/+                   |
|  |          | 1024 x 768  | 60Hz | 48.363                     | 60.004                  | 65.000                      | -/-                   |
|  |          | 1024 x 768  | 70Hz | 56.476                     | 70.069                  | 75.000                      | -/-                   |
|  |          | 1024 x 768  | 75Hz | 60.023                     | 75.029                  | 78.750                      | +/+                   |
| 20"                                    |          | 1600 x 900  | 60Hz | 60.000                     | 60.000                  | 108.000                     | +/+                   |
| 20"<br>22"<br>23"<br>24"<br>27"        | MAC      | 1152 x 870  | 75Hz | 68.681                     | 75.062                  | 100.000                     | -/-                   |
|  |          | 1152 x 864  | 75Hz | 67.500                     | 75.000                  | 108.000                     | +/+                   |
|  | VESA DMT | 1280 x 800  | 60Hz | 49.702                     | 59.810                  | 83.500                      | -/+                   |
|  |          | 1280 x 960  | 60Hz | 60.000                     | 60.000                  | 108.000                     | +/+                   |
|  |          | 1280 x 1024 | 60Hz | 63.981                     | 60.020                  | 108.000                     | +/+                   |
|  |          | 1280 x 1024 | 75Hz | 79.976                     | 75.025                  | 135.000                     | +/+                   |
|  |          | 1440 x 900  | 60Hz | 55.935                     | 59.887                  | 106.500                     | -/+                   |
|  |          | 1440 x 900  | 75Hz | 70.635                     | 74.984                  | 136.750                     | -/+                   |
|  |          | 1360 x 768  | 60Hz | 47.712                     | 60.015                  | 85.500                      | +/+                   |
|  |          | 1680 x 1050 | 60Hz | 65.290                     | 59.954                  | 146.250                     | -/+                   |
| 19" 22" 23" 24" 27"                    |          | 1920 x 1080 | 60Hz | 67.500                     | 60.000                  | 148.500                     | +/+                   |

### NOTE

- For PC connection, you must use the **HDMI IN 1(DVI)** jack.
- The interlace mode is not supported.
- The set might operate abnormally if a non-standard video format is selected.
- Separate and Composite modes are supported. SOG(Sync On Green) is not supported.



# Connections

## Changing the Input Source

### Source



**SOURCE** → **Source**

Use to select TV or an external input sources such as a DVD / Blu-ray player / cable box /STB satellite receiver.

■ **TV / Ext. / PC / HDMI1/DVI / HDMI2 / AV / Component / USB**

🔑 In the **Source**, connected inputs will be highlighted.

🔑 **TV, Ext. and PC** always stay activated.

**SOURCE** (E...)



### Edit Name



**SOURCE** → **TOOLS** → **Edit Name** → **ENTER** (↵)

In the **Source**, press the **TOOLS** button, and then you can set an external input sources name you want.

■ **VCR / DVD / Cable STB / Satellite STB / PVR STB / AV Receiver / Game / Camcorder / PC / DVI PC / DVI Devices / TV / IPTV / Blu-ray / HD DVD / DMA:** Name the device connected to the input jacks to make your input source selection easier.

🔑 When connecting a PC to the **HDMI IN 1 (DVI)** port with HDMI cable, you should set the TV to **PC** mode under **Edit Name**.

🔑 When connecting a PC to the **HDMI IN 1 (DVI)** port with HDMI to DVI cable, you should set the TV to **DVI PC** mode under **Edit Name**.

🔑 When connecting an AV devices to the **HDMI IN 1 (DVI)** port with HDMI to DVI cable, you should set the TV to **DVI Devices** mode under **Edit Name**.

### Information




**SOURCE** → **TOOLS** → **Information** → **ENTER** (↵)

You can see detailed information about the selected external device.

# Basic Features

## How to Navigate Menus

Before using the TV, follow the steps below to learn how to navigate the menu and select and adjust different functions.

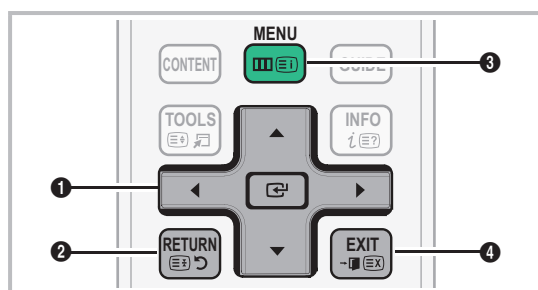

- 1 **ENTER** (↵) / Direction button: Move the cursor and select an item. Confirm the setting.
- 2 **RETURN** button: Returns to the previous menu.
- 3 **MENU** button: Displays the main on-screen menu.
- 4 **EXIT** button: Exits the on-screen menu.

## How to Operate the OSD (On Screen Display)

The access step may differ depending on the selected menu.

- |   |                  |  |
|---|------------------|--|
| 1 | <b>MENU</b> (≡)  | The main menu options appear on the screen:<br><b>Picture, Sound, Channel, System, Support.</b>                          |
| 2 | ▲ / ▼            | Select an icon with the ▲ or ▼ button.   |
| 3 | <b>ENTER</b> (↵) | Press <b>ENTER</b> (↵) to access the sub-menu.   |
| 4 | ▲ / ▼            | Select the desired submenu with the ▲ or ▼ button.   |
| 5 | ◀ / ▶            | Adjust the value of an item with the ▶ or ▶ button. The adjustment in the OSD may differ depending on the selected menu. |
| 6 | <b>ENTER</b> (↵) | Press <b>ENTER</b> (↵) to complete the configuration.  |
| 7 | <b>EXIT</b> (→X) | Press <b>EXIT</b> .  |

# Basic Features

## Using the INFO button (Now & Next guide)

The display identifies the current channel and the status of certain audio-video settings.

The Now & Next guide shows daily TV programme information for each channel according to the broadcasting time.

- Scroll ◀ / ▶ to view information for a desired programme while watching the current channel.
- Scroll ▲ / ▼ to view information for other channels. If you want to move to the currently selected channel, press the ENTER button.



## Using the Channel Menu

Press the CONTENT button to select **Watch TV**, and then select the menu you want to use. Each screen will be displayed.



- The displayed image may differ depending on the model.


## Guide

CONTENT → Watch TV → Guide → ENTER

The EPG (Electronic Programme Guide) information is provided by broadcasters. Using programme schedules provided by broadcasters, you can specify programmes you want to watch in advance so that the channel automatically changes to the selected programme channel at the specified time. Programme entries may appear blank or out of date depending on a channel status.



## Using Channel View

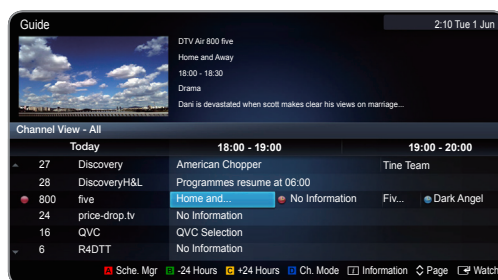

- The displayed image may differ depending on the model.

- **A** Red (Sche. Mgr) : Displays the **Schedule Manager**.
- **G** Green (-24 Hours): Viewing the list of programmes to be broadcasted before 24 hours.
- **Y** Yellow (+24 Hours): Viewing the list of programmes to be broadcasted after 24 hours.
- **B** Blue (Ch. Mode): Select the type of channels you want to display on the **Channel View** window.
- **I** Information: Displays details of the selected programme.
- **◀ ▶** (Page): Move to next or previous page.
- **⏮ ⏭** (Watch / Schedule)
  - When selecting the current programme, you can watch the selected programme.
  - When selecting the future programme, you can reserve to watch the selected programme. To cancel the schedule, press the ENTER button again and select **Cancel Schedules**.

## Schedule Manager

CONTENT → Watch TV → Schedule Manager → ENTER

You can view, modify or delete a channel you have reserved to watch.

## Using the Timer Viewing

You can set a desired channel to be displayed automatically at the intended time. Set the current time first to use this function.

1. Press the ENTER button to select **Schedule Manager**.
2. Press the ENTER button to add programme to schedule manually. The **Timer Viewing** screen appears.
3. Press the ◀ / ▶ / ▲ / ▼ buttons to set the **Antenna, Channel, Repeat, Date** or **Start Time**.

# Basic Features

- **Antenna:** Select the desired antenna source.
- **Channel:** Select the desired channel.
- **Repeat:** Select **Once**, **Manual**, **Sat~Sun**, **Mon~Fri** or **Everyday** to set at your convenience. If you select **Manual**, you can set the day you want.

The mark indicates the date is selected.

- **Date:** you can set desired date.  
 It is available when you select **Once** in **Repeat**.
- **Start Time:** You can set start time you want.  
 On the **Information** screen, you can change or cancel a reserved information.
  - **Cancel Schedules:** Cancel a show you have reserved to watch.
  - **Edit:** Change a show you have reserved to watch.
  - **Return:** Return to the previous screen.

## Channel List

**CONTENT** → **Watch TV** → **Channel List** → **ENTER**

You can view all the channel searched.



- The displayed image may differ depending on the model.

When you press the **CH LIST** button on the remote control, **Channel List** screen will be displayed at once.

Using the operation buttons with the **Channel List**.

- **Red (Antenna):** Switches to **Air** or **Cable**.
- **Yellow (Programme View / Channel View):** Displays the programme when digital channel is selected. Returns to the channel view.
- **(Ch. Mode / Channel):** Move to the type of channels you want to display on the **Channel List** screen.  
 The option may differ depending on country.
- **(Watch):** Watches the channel you select.
- **(Page):** Move to next or previous page.

## How to use Timer Viewing in Channel List (digital channels only)

When you set the **Timer Viewing** in **Channel List**, you can only set the programme in **Programme View**.

1. Press the **CH LIST** button, then select a desired digital channel.
2. Press the **(Programme View)** button.
3. Press the buttons to select the desired programme, then press the **(Information)** button.
4. Select **Timer Viewing**, then press the **ENTER** button when done.

If you want to cancel **Timer Viewing**, follow steps 1 through 3. Select **Cancel Schedules**.

## Using the Channel

**CONTENT** → **Watch TV** → **Channel Manager** → **ENTER**

## Channel Manager

Edit the favourite channel and set the channels to **Delete**, **Deselect All** or **Select All**. You can edit the channel name only for analogue channels.



- The displayed image may differ depending on the model.

- **Channels:** Select a channel in the **All**, **TV**, **Radio**, **Data/Other**, **Analogue** and **Favourites 1 - 5** screen. Change the antenna, or channel settings using the menus in the top right corner of the screen.





- **Favourites 1 - 5:** Shows favourite channels.

Using the colour buttons with the **Channel Manager**.

- **Red (Antenna):** Switches to **Air** or **Cable**.
- **Blue (Sorting):** Change the list ordered by channel name or channel number.











# Basic Features

## Channel Status Display Icons

| Icons   | Operations                    |
|---|-------------------------------|
|  | An analogue channel.          |
|  | A channel selected.           |
|  | A channel set as a Favourite. |
|  | A locked channel.             |

## Channel Manager Option Menu

Set each channel using the **Channel Manager** menu options (**Watch**, **Add to Favourites / Edit Favourites**, **Lock / Unlock**, **Edit Channel Name**, **Edit Channel Number**, **Delete**, **Deselect All / Select All**). Option menu items may differ depending on the channel status.

1. Select a channel and press the **TOOLS** button.
2. Select a function and change its settings.
  - **Watch**: Watch the selected channel.
  - **Add to Favourites / Edit Favourites** : Set channels you watch frequently as favourites.
    1. Select the **Add to Favourites / Edit Favourites**, then press the **ENTER**  button.
      -  If the channel is already added to favourite channel, **Edit Favourites** will be shown.
    2. Press the **ENTER**  button to select **Favourites 1 - 5**, then press the **OK** button.
      -  One favourite channel can be added in several of **Favourites** among **Favourites 1 - 5**.
  - **Lock / Unlock** : Lock a channel so that the channel cannot be selected and viewed.
    -  This function is available only when the **Channel Lock** is set to **On**.
    -  The PIN input screen appears. Enter your 4-digit PIN, the default of which is "0-0-0-0". Change the PIN using the **Change PIN** option.
  - **Edit Channel Name** (analogue channels only): Assign your own channel name.
    -  This function may not support depending on the region.
  - **Edit Channel Number**: Edit the number by pressing the number buttons desired.
    -  This function may not support depending on the region.
  - **Delete**: You can delete a channel to display the channels you want.
  - **Deselect All / Select All**: Select all the channels or deselect all the selected channels in the channel manager.

## Channel Menu

### Retuning Channels


 **MENU**  → **Channel** → **ENTER** 

### Antenna (Air / Cable)


Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV.

### Country



The PIN input screen appears. Enter your 4 digit PIN number.

-  Select your country so that the TV can correctly auto-tune the broadcasting channels.
- **Digital Channel**: Change the country for digital channels.
- **Analogue Channel**: Change the country for analogue channels.

### Auto Tuning

-  Automatically allocated programme numbers may not correspond to actual or desired programme numbers. If a channel is locked using the **Channel Lock** function, the PIN input window appears.

#### ■ Auto Tuning

- **Air / Cable**: Select the antenna source to memorise.
- Digital & Analogue / Digital / Analogue**: Select the channel source to memorise.
  -  When selecting **Cable** → **Digital & Analogue** or **Digital**: Provide a value to scan for cable channels.
- **Search Mode (Full / Network / Quick)**: Scans for all channels with active broadcast stations and stores them in the TV.
  -  If you select **Quick**, you can set up the **Network**, **Network ID**, **Frequency**, **Modulation** and **Symbol Rate** manually by pressing the button on the remote control.
- **Network (Auto / Manual)**: Selects the **Network ID** setting mode among **Auto** or **Manual**.
- **Network ID**: When **Network** is **Manual**, you can set up **Network ID** using the numeric buttons.
- **Frequency**: Displays the frequency for the channel. (differs in each country)
- **Modulation**: Displays available modulation values.
- **Symbol Rate**: Displays available symbol rates.

# Basic Features

## ■ Cable Search Option


(depending on the country)

Sets additional search options such as the frequency and symbol rate for a cable network search.



- **Start Frequency / Stop Frequency:** Set the start or stop frequency (differs in each country).
- **Symbol Rate:** Displays available symbol rates.
- **Modulation:** Displays available modulation values.

## Manual Tuning

Scans for a channel manually and stores in the TV.

 If a channel is locked using the **Channel Lock** function, the PIN input window appears.

### ■ Digital Channel Tuning: Scans for a digital channel.

1. Press the **A** button to select **New**.
  -  When selecting **Antenna** → **Air: Channel, Frequency, Bandwidth**
  -  When selecting **Antenna** → **Cable: Frequency, Modulation, Symbol Rate**
2. Press the **▼** button to select **Search**. When scanning has finished, a channel is updated in the channel list.

### ■ Analogue Channel Tuning: Scans for an analogue channel.

1. Press the **A** button to select **New**.
2. Set the **Programme, Colour System, Sound System, Channel** and **Search**.
3. Press the **▼** button to select **Store**. When scanning has finished, a channel is updated in the channel list.




 Channel mode

- **P** (programme mode): When tuning is complete, the broadcasting stations in your area have been assigned to position numbers from P0 to P99. You can select a channel by entering the position number in this mode.
- **C** (aerial channel mode) / **S** (cable channel mode): These two modes allow you to select a channel by entering the assigned number for each aerial broadcasting station or cable channel.

## Fine Tune

(analogue channels only)

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, fine tune the channel manually. Scroll to the left or right until the image is clear.

-  Settings are applied to the channel you're currently watching.
-  Fine tuned channels that have been saved are marked with an asterisk "\*" on the right-hand side of the channel number in the channel banner
-  To reset the fine-tuning, select **Reset**.




## Transfer Channel List

The PIN input screen appears. Enter your 4 digit PIN number. Imports or exports the channel map. You should connect a USB storage to use this function.

- **Import from USB:** Import channel list from USB.
- **Export to USB:** Export channel list to USB. this function is available when USB is connected.


## Picture Menu


### Changing the Preset Picture Mode

 **MENU**  → **Picture** → **Picture Mode** → **ENTER** 

## Picture Mode

Select your preferred picture type.

 When an input source is set to PC, the **Picture Mode** is only available the **Standard** and **Entertain**.

- **Dynamic:** Suitable for a bright room.
- **Standard:** Suitable for a normal environment.
- **Movie:** Suitable for watching movies in a dark room.
- **Entertain:** Suitable for watching movies and games.
  -  Available only PC mode.




# Basic Features

## Adjusting Picture Settings

 MENU  → Picture → ENTER 

### Samsung MagicAngle

This feature allows you to see optimal screen quality according to your viewing position. When viewing the screen at an angle from below, above or the side of the product, by setting the appropriate mode for each position you can obtain a similar picture quality as viewing the screen directly from the front.

- **Off:** Select when viewing from the front position.
  - **Lean back mode:** Select when viewing from a slightly lower position.
  - **Standing Mode:** Select when viewing from the upper position.
-  When **Samsung MagicAngle** is set to **Lean back mode** or **Standing Mode**, **Gamma** is not available.

### Backlight / Contrast / Brightness / Sharpness / Colour / Tint (G/R)

Your television has several setting options for picture quality control.

#### NOTE

- In analogue **TV**, **Ext.**, **AV** modes of the PAL system, the **Tint (G/R)** function is not available.
- In PC mode, you can only make changes to **Backlight**, **Contrast**, **Brightness** and **Sharpness**.
- Settings can be adjusted and stored for each external device connected to the TV.
- Lowering picture brightness reduces power consumption.

## Screen Adjustment


- **Picture Size:** Your cable box / satellite receiver may have its own set of screen sizes as well. However, we highly recommend you use 16:9 mode most of the time.




**Auto Wide:** Automatically adjusts the picture size to the 16:9 aspect ratio.

**16:9:** Sets the picture to 16:9 wide mode.


**Wide Zoom:** Magnifies the picture size more than 4:3.

 Adjusts the **Position** by using ▲ / ▼ buttons.


**Zoom:** Magnifies the 16:9 wide pictures vertically to fit the screen size.

 Adjusts the **Zoom** or **Position** by using ▲ / ▼ button.

**4:3:** Sets the picture to basic (4:3) mode.


 Do not watch in 4:3 format for a long time. Traces of borders displayed on the left, right and centre of the screen may cause image retention (screen burn) which are not covered by the warranty.

**Screen Fit:** Displays the full image without any cut-off when HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) signals are inputted.

 Adjusts the **Position** by using ▲ / ▼ / ◀ / ▶ button.

#### NOTE

- Depending on the input source, the picture size options may vary.
  - The available items may differ depending on the selected mode.
  - In **PC** mode, only **16:9** and **4:3** modes can be adjusted.
  - Settings can be adjusted and stored for each external device connected to an input on the TV.
  - If you use the **Screen Fit** function with HDMI 720p input, 1 line will be cut at the top, bottom, left and right as in the overscan function.
- **4:3 Screen Size (16:9 / Wide Zoom / Zoom / 4:3):** Available only when picture size is set to **Auto Wide**. You can determine the desired picture size at the 4:3 WSS (Wide Screen Service) size or the original size. Each European country requires different picture size.

 Not available in PC, Component or HDMI mode.

# Basic Features

## ■ PC Screen Adjustment

 Available only **PC** mode.

**Coarse / Fine:** Removes or reduces picture noise. If the noise is not removed by Fine-tuning alone, then adjust the frequency as best as possible (**Coarse**) and Fine-tune again. After the noise has been reduced, readjust the picture so that it is aligned to the centre of screen.

**Position:** Adjusts the PC screen position with direction button (▲ / ▼ / ◀ / ▶).

**Image Reset:** Resets the image to default settings.

## ■ Setting up the TV with Your PC


Select the input source to PC.



**MENU**  **Picture**  **ENTER** 

## Auto Adjustment

Frequency values/ position and fine tune are adjusted automatically.

 Not available when connecting with an HDMI to DVI cable.


## Using Your TV as a Computer (PC) Display

Setting Up Your PC Software (Based on Windows XP)

Depending on the version of Windows and the video card, the actual screens on your PC may differ in which case the same basic set-up information will almost always be applied. (If not, contact your computer manufacturer or Samsung Dealer.)

1. Click on "Control Panel" on the Windows start menu.
2. Click on "Appearance and Themes" in the "Control Panel" window and a display dialog-box will appear.
3. Click on "Display" and a display dialog box will appear.
4. Navigate to the "Settings" tab on the display dialog-box.
  - The correct size setting (resolution)  
[Optimum : 19: 1360 X 768 pixels / 20: 1600 X 900 pixels / 22~27: 1920 X 1080 pixels]
  - If a vertical-frequency option exists on your display settings dialog box, the correct value is "60" or "60 Hz". Otherwise, just click "OK" and exit the dialog box.

## Maintaining the Correct Posture when Using this Product

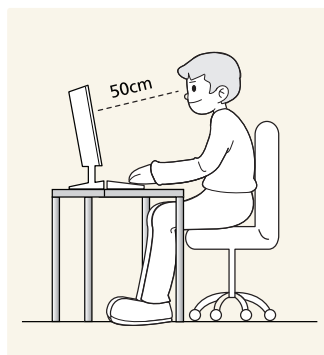





Maintain the correct posture when using this product.

- Straighten your back.
- Keep a distance of 45~50 cm (15~19 inches) from your eyes to the screen. Look down at the screen and face the screen forwards.
- Adjust the angle of the product so that light is not reflected onto the screen.
- Keep your elbow at a right angle and keep your arm level with the back of your hand.
- Keep your elbow at a right angle.
- Place your heels flat on the ground while keeping your knees at an angle of 90 degrees or higher and maintain the position of your arm so that your arm is below your heart.

## Changing the Picture Options


## Advanced Settings



**MENU**  **Picture**  **Advanced Settings**  **ENTER** 


(**Advanced Settings** are available in **Standard / Movie** mode)

Compared to previous models, new Samsung TVs have a more precise picture.

 In PC mode, you can only make changes to **Gamma** and **White Balance**



# Basic Features

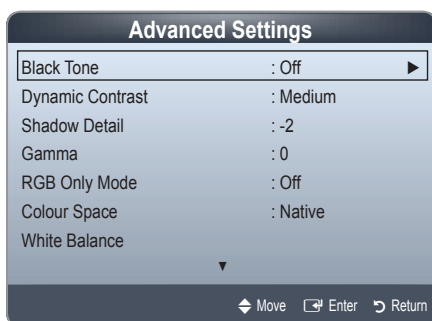

- **Black Tone (Off / Dark / Darker / Darkest):** Select the black level to adjust the screen depth.
- **Dynamic Contrast (Off / Low / Medium / High):** Adjust the screen contrast.
- **Shadow Detail (-2~+2):** Increase the brightness of dark images.
- **Gamma:** Adjust the primary colour intensity.
- **RGB Only Mode (Off / Red / Green / Blue):** Displays the **Red**, **Green** and **Blue** colour for making fine adjustments to the hue and saturation.
- **Colour Space (Auto / Native):** Adjust the range of colours available to create the image.
- **White Balance:** Adjust the colour temperature for a more natural picture.  
**R-Offset / G-Offset / B-Offset:** Adjust each colour's (red, green, blue) darkness.  
**R-Gain / G-Gain / B-Gain:** Adjust each colour's (red, green, blue) brightness.  
**Reset:** Resets the **White Balance** to it's default settings.
- **Flesh Tone:** Emphasize pink "Flesh Tone."
- **Edge Enhancement (Off / On):** Emphasize object boundaries.
- **Motion Lighting (Off / On):** Reduce power consumption by brightness control.

## Picture Options

MENU → Picture → Picture Options → ENTER

In PC mode, you can only make changes to the **Colour Tone**.



- **Colour Tone (Cool / Standard / Warm1 / Warm2)**  
**Warm1** or **Warm2** will be deactivated when the picture mode is **Dynamic**.  
 Settings can be adjusted and stored for each external device connected to an input on the TV.
- **Digital Noise Filter (Off / Low / Medium / High / Auto / Auto Visualisation):** If the broadcast signal received by your TV is weak, you can activate the **Digital Noise Filter** feature to reduce any static and ghosting that may appear on the screen.  
 When the signal is weak, try other options until the best picture is displayed.  
**Auto Visualisation:** When changing analogue channels, displays signal strength.  
 Only available for analogue channels.  
 When bar is green, you are receiving the best possible signal.
- **MPEG Noise Filter (Off / Low / Medium / High / Auto):** Reduces MPEG noise to provide improved picture quality.
- **HDMI Black Level (Normal / Low):** Selects the black level on the screen to adjust the screen depth.  
 Available only in **HDMI** mode.
- **Film Mode (Off / Auto1 / Auto2):** Sets the TV to automatically sense and process film signals from all sources and adjust the picture for optimum quality.  
 Available in TV, AV, COMPONENT (480i / 1080i) and HDMI (480i / 1080i).






# Basic Features

## Reset Picture (OK / Cancel)

Resets your current picture mode to its default settings.


### Sound Menu

## Changing the Preset Sound Mode

 MENU  → Sound → Sound Mode → ENTER 




## Sound Mode

- **Standard:** Selects the normal sound mode.
- **Music:** Emphasizes music over voices.
- **Movie:** Provides the best sound for movies.
- **Clear Voice:** Emphasizes voices over other sounds.
- **Amplify:** Increase the intensity of high-frequency sound to allow a better listening experience for the hearing impaired.


 If **Speaker Select** is set to **External Speaker**, **Sound Mode** is disabled.

## Adjusting Sound Settings

## Sound Effect

 MENU  → Sound → Sound Effect → ENTER 

(standard sound mode only)

 If **Speaker Select** is set to **External Speaker**, **Sound Effect** is disabled.

### ■ SRS TruSurround HD (Off / On)

This function provides a virtual 5.1 channel surround sound experience through a pair of speakers using HRTF (Head Related Transfer Function) technology.



### ■ SRS TruDialog (Off / On)




This function allows you to increase the intensity of a voice over background music or sound effects so that dialog can be heard more clearly.

### ■ Equalizer

Adjusts the sound mode.

- **Balance L/R:** Adjusts the balance between the right and left speaker.
- **100Hz / 300Hz / 1kHz / 3kHz / 10kHz** (Bandwidth Adjustment): Adjusts the level of specific bandwidth frequencies.
- **Reset:** Resets the equalizer to its default settings.

## Sound Systems, Etc.


 MENU  → Sound → ENTER 

## Broadcast Audio Options

### ■ Audio Language

(digital channels only)


Change the default value for audio languages.

 The available language may differ depending on the broadcast.

### ■ Audio Format

(digital channels only)


When sound is emitted from both the main speaker and the audio receiver, a sound echo may occur due to the decoding speed difference between the main speaker and the audio receiver. In this case, use the **TV Speaker** function.

 **Audio Format** option may differ depending on the broadcast. 5.1ch Dolby digital sound is only available when connecting an external speaker through an optical cable.

### ■ Audio Description

(not available in all locations) (digital channels only)

This function handles the Audio Stream for the AD (Audio Description) which is sent along with the Main audio from the broadcaster.

 **Audio Description (Off / On):** Turn the audio description function on or off.


 **Volume:** Adjust the audio description volume.




## Additional Setting

(digital channels only)

- **DTV Audio Level (MPEG / HE-AAC):** This function allows you to reduce the disparity of a voice signal (which is one of the signals received during a digital TV broadcast) to a desired level.

 According to the type of broadcast signal, **MPEG / HE-AAC** can be adjusted between -10dB and 0dB.

 To increase or decrease the volume, adjust between the range 0 and -10 respectively.

# Basic Features

- **SPDIF Output:** SPDIF (Sony Philips Digital InterFace) is used to provide digital sound, reducing interference going to speakers and various digital devices such as a DVD player.

**Audio Format:** You can select the Digital Audio output (SPDIF) format.

The available Digital Audio output (SPDIF) format may differ depending on the input source.

**Audio Delay:** Correct audio-video sync problems, when watching TV or video, and when listening to digital audio output using an external device such as an AV receiver (0ms ~ 250ms).

- **Dolby Digital Comp (Line / RF):** This function minimizes signal disparity between a dolby digital signal and a voice signal (i.e. MPEG Audio, HE-AAC, ATV Sound).

Select **Line** to obtain dynamic sound, and **RF** to reduce the difference between loud and soft sounds at night time.

**Line:** Set the output level for signals greater or less than -31dB (reference) to either -20dB or -31dB.

**RF:** Set the output level for signals greater or less than -20dB (reference) to either -10dB or -20dB.

## Speaker Settings

- **Speaker Select (External Speaker / TV Speaker):** A sound echo may occur due to a difference in decoding speed between the main speaker and the audio receiver. In this case, set the TV to **External Speaker**.

When **Speaker Select** is set to **External Speaker**, the volume and **MUTE** buttons will not operate and the sound settings will be limited.

When **Speaker Select** is set to **External Speaker**.

- **TV Speaker: Off, External Speaker: On**

When **Speaker Select** is set to **TV Speaker**.

- **TV Speaker: On, External Speaker: On**

If there is no video signal, both speakers will be mute.

- **Auto Volume (Off / Normal / Night):** To equalize the volume level on each channel, set to **Normal**.

**Night:** This mode provides an improved sound experience compared to **Normal** mode, making almost no noise. It is useful at night.

## Reset Sound (OK / Cancel)

Reset all sound settings to the factory defaults.

## Selecting the Sound Mode

When you set to **Dual II**, the current sound mode is displayed on the screen.



|              | Audio Type | Dual I-II                            | Default          |
|--------------|------------|--------------------------------------|------------------|
| A2 Stereo    | Mono       | <b>Mono</b>                          | Automatic change |
|              | Stereo     | <b>Stereo ↔ Mono</b>                 |                  |
|              | Dual       | <b>Dual I ↔ Dual II</b>              |                  |
| NICAM Stereo | Mono       | <b>Mono</b>                          | Automatic change |
|              | Stereo     | <b>Mono ↔ Stereo</b>                 |                  |
|              | Dual       | <b>Mono ↔ Dual I<br/>↖ Dual II ↗</b> |                  |
|              |            |                                      | <b>Dual I</b>    |

If the **Stereo** signal is weak and an automatic switching, occurs, then switch to the **Mono**.

Only activated in stereo sound signal.

Only available when the input **Source** is set to **TV**.

## System Menu

## Setting the Time

MENU → System → ENTER

## Time

- **Clock:** Setting the clock is for using various timer features of the TV.

The current time will appear every time you press the **INFO** button.

If you disconnect the power cord, you have to set the clock again.

### Clock Mode (Auto / Manual)

- **Auto:** Set the current time automatically using the time from a digital channel.

The antenna must be connected in order to set the time automatically.

- **Manual:** Set the current time manually.

Depending on the broadcast station and signal, the auto time set up may not be correct. In this case, set the time manually.

# Basic Features

**Clock Set:** Set the **Day, Month, Year, Hour** and **Minute** manually.

Available only when **Clock Mode** is set to **Manual**.

You can set the **Day, Month, Year, Hour** and **Minute** directly by pressing the number buttons on the remote control.

**Time Zone (Auto / Manual):** Set the time zone to **GMT**.

This function is only available when the **Clock Mode** is set to **Auto**.

– **GMT(GMT-3:00~GMT-1:00 / GMT / GMT+1:00~GMT+ 12:00):** Selects your time zone.

This function is only available when the **Time Zone** is set to **Manual**.

– **DST(Daylight Saving Time) (Off / On):** Switches the Daylight Saving Time function on or off.

This function is only available when the **Time Zone** is set to **Manual**.

## Using the Sleep Timer

■ **Sleep Timer** : Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes).

To cancel **Sleep Timer**, select **Off**.

## Setting the On / Off Timer

■ **On Timer 1 / On Timer 2 / On Timer 3:** Three different on timer settings can be made. You must set the clock first.



**Setup:** Select **Off, Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun** or **Manual** to set at your convenience. If you select **Manual**, you can set up the day you want to activate the timer.

The mark indicates the day is selected.

**On Time:** Set the hour and minute.

**Volume:** Set the desired volume level.

**Source:** Select **TV** or **USB** content to be played when the TV is turned on automatically. (**USB** can be selected only when a USB device is connected to the TV)

**Antenna** (when the **Source** is set to **TV**): Select **ATV** or **DTV**.

**Channel** (when the **Source** is set to **TV**): Select the desired channel.


**Music / Photo** (when the **Source** is set to **USB**): Select a folder in the USB device containing music or photo files to be played when the TV is turned on automatically.

### NOTE

- If there is no music file on the USB device or the folder containing a music file is not selected, the Timer function does not operate correctly.
- When there is only one photo file in the USB, the Slide Show will not play.
- If a folder name is too long, the folder cannot be selected.
- Each USB you use is assigned its own folder. When using more than one of the same type of USB, make sure the folders assigned to each USB have different names.
- It is recommended that you use a USB memory stick and a multi card reader when using **On Timer**. The **On Timer** function may not work with USB devices with a built-in battery, MP3 players, or PMPs made by some manufacturers because these devices take a long time to be recognized.

# Basic Features

- **Off Timer 1 / Off Timer 2 / Off Timer 3:** Three different off timer settings can be made. You must set the clock first.

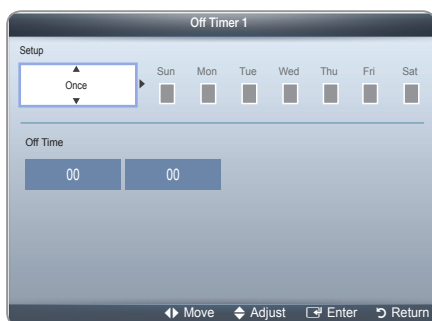

**Setup:** Select **Off**, **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun** or **Manual** to set at you convenience. If you select **Manual**, you can set up the day you want to activate the timer.

The ✓ mark indicates the day is selected.

**Off Time:** Set the hour and minute.

## Locking Programmes

MENU → System → Security → ENTER

## Security

- The PIN input screen appears before the setup screen.
- Enter your 4-digit PIN, the default of which is "0-0-0-0". Change the PIN using the **Change PIN** option.

- **Channel Lock (Off / On):** Lock channels in **Channel Manager**, to prevent unauthorized users, such as children, from watching unsuitable programme.
  - Available only when the input **Source** is set to **TV**.
- **Program Rating Lock** (depending on the country): Prevent unauthorized users, such as children, from watching unsuitable programme with a user-defined 4-digit PIN code. If selected channel is locked, the "🔒" symbol will be displayed.
 

**Allow All:** Unlock All TV ratings (Not supported in France and Sweden).

- When **Program Rating Lock** is set to **18**, the PIN input screen appears before changing the channels (France only).
- You can block TV programs by set up rating in **Program Rating Lock** as the **I** (children), **T** (All public), **SC** (Unclassified) and **X** (X rated). When **Program Rating Lock** is set to **X**, the PIN input screen always before changing the channels (Spain only).
- You can block TV programs by set up rating in **Program Rating Lock** as the **Children**, **Youth** or **Adult** (Sweden only).

- **Change PIN:** The **Change PIN** screen will appear. Choose any 4 digits for your PIN and enter them. Change your personal ID number required to set up the TV. Re-enter the same 4 digits. When the Confirm screen disappears, your PIN has been memorised.

### How to watch a restricted channel

If the TV is tuned to a restricted channel, the **Program Rating Lock** will block it. The screen will go blank and the following message will appear: This channel is blocked by **Program Rating Lock**. Please enter the PIN to unblock.

- If you forget the PIN, press the remote-control buttons in the following sequence, which resets the pin to "0-0-0-0": **POWER** (off) → **MUTE** → 8 → 2 → 4 → **POWER** (on)

## Economical Solutions




MENU → System → Eco Solution → ENTER

## Eco Solution


- **Energy Saving (Off / Low / Medium / High / Picture Off)** : This adjusts the brightness of the TV in order to reduce power consumption. If you select **Picture Off**, the screen is turned off, but the sound remains on. Press any button except volume button to turn on the screen.
- **No-Signal Power Off (Off / 15 min / 30 min / 60 min):** To avoid unnecessary energy consumption, set how long you want the TV to remain on if it's not receiving a signal.
  - Disabled when the PC is in power saving mode.
- **Auto Power Off (Off / On):** Saves power by turning TV off automatically when no user operation is received for 4 hours.

# Basic Features

## Other Features

 MENU  → System → ENTER 

## Language

- **Menu Language:** Set the menu language.
- **Teletext Language:** Set a desired language for teletext.
  -  English is the default in cases where the selected language is unavailable in the broadcast.
- **Preference (Primary Audio Language / Secondary Audio Language / Primary Subtitle Language / Secondary Subtitle Language / Primary Teletext Language / Secondary Teletext Language):** Select a language, which will be the default language when a channel is selected.


## Subtitle


Use this menu to set the **Subtitle** mode.

- **Subtitle (Off / On):** Switches subtitles on or off.

- **Subtitle Mode (Normal / Hearing Impaired):** Sets the subtitle mode.

- **Subtitle Language:** Sets the subtitle language.

 If the programme you are watching does not support the **Hearing Impaired** function, **Preferred** automatically activates even if the **Hearing Impaired** mode is selected.

 English is the default in cases where the selected language is unavailable in the broadcast.



## Digital Text (Disable / Enable)

(UK only)


If the programme broadcasts with digital text, this feature is enabled.

## Auto Protection Time

- **Off / 2 hours / 4 hours / 8 hours / 10 hours:** If the screen remains idle with a still image for a certain period of time defined by the user, the screen saver is activated to prevent the formation of ghost images on the screen.

## General

- **Max. Power Saving (Off / On):** Turn off PC monitor when PC is not used for certain length of time to reduce power consumption.

 Available only **PC** mode.

- **Game Mode (Off / On):** When connecting to a game console such as PlayStation™ or Xbox™, you can enjoy a more realistic gaming experience by selecting game mode.

### NOTE

- Precautions and limitations for game mode
  - To disconnect the game console and connect another external device, set **Game Mode** to **Off** in the setup menu.
  - If you display the TV menu in **Game Mode**, the screen shakes slightly.
- **Game Mode** is not available when the input source is set to TV or PC.
- After connecting the game console, set **Game Mode** to **On**. Unfortunately, you may notice reduced picture quality.
- If **Game Mode** is **On**:
  - **Picture** mode is set to **Standard** and **Sound** mode is set to **Movie**.

- **Menu Transparency (Bright / Dark):** Set the Transparency of the menu.

- **Boot Logo (Off / On):** Display Samsung logo when the TV is turned on.

## Anynet+ (HDMI-CEC)

For details on set up options, refer to the "Anynet+ (HDMI-CEC)" instructions.

## DivX® Video On Demand

Shows the registration code authorized for the TV. If you connect to the DivX web site and register, you can download the VOD registration file. If you play the VOD registration using **My Downloads**, the registration is completed.

 For more information on DivX® VOD, visit "<http://vod.divx.com>".

# Basic Features

## Common Interface

- **CI Menu:** This enables the user to select from the CAM-provided menu. Select the CI Menu based on the menu PC Card.
  - **Application Info:** View information on the CAM inserted into the CI slot and on the "CI or CI+ CARD" which is inserted into the CAM. You can install the CAM anytime whether the TV is on or off.
1. Purchase a CI CAM module at your nearest dealer or by phone.
  2. Firmly insert the "CI or CI+ CARD" into the CAM in the direction of the arrow.
  3. Insert the CAM with the "CI or CI+ CARD" into the common interface slot, in the direction of the arrow so that it aligns parallel with the slot.
  4. Check if you can see a picture on a scrambled signal channel.

## Picture In Picture (PIP)

 MENU  → System → PIP → ENTER 







## PIP

You can watch the TV tuner and one external video source simultaneously. **PIP** (Picture-in-Picture) does not function in the same mode.

### NOTE

- For PIP sound, refer to the **Sound Select** instructions.
- If you turn the TV off while watching in **PIP** mode, the PIP window will disappear.
- You may notice that the picture in the PIP window becomes slightly unnatural when you use the main screen to view a game or karaoke.
- While **Program Rating Lock** is in operation, the PIP function cannot be used.
- PIP settings


| Main picture                    | Sub picture |
|---------------------------------|-------------|
| Component, HDMI1/DVI, HDMI2, PC | TV          |

- **PIP (Off / On):** Activate or deactivate the PIP function.
- **Channel:** Select the channel for the sub-screen.
- **Size** ( / ): Select a size for the sub-picture.
- **Position** ( /  /  / ): Select a position for the sub-picture.
- **Sound Select (Main / Sub):** You can choose the desired sound (**Main / Sub**) in **PIP** mode.

## Support Menu

 MENU  → Support → ENTER 

## Self Diagnosis


 **Self Diagnosis** might take few seconds, this is part of the normal operation of the TV


- **Picture Test (Yes / No):** Use to check for picture problems.

**Yes:** If the test pattern does not appear or there is noise in the test pattern, select **Yes**. There may be a problem with the TV. Contact Samsung's Call Centre for assistance.

**No:** If the test pattern is properly displayed, select **No**. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.

- **Sound Test (Yes / No):** Use the built-in melody sound to check for sound problems.

 If you hear no sound from the TV's speakers, before performing the sound test, make sure **Speaker Select** is set to **TV Speaker** in the **Sound** menu.

 The melody will be heard during the test even if **Speaker Select** is set to **External Speaker** or the sound is muted by pressing the **MUTE** button.

**Yes:** If you can hear sound only from one speaker or not at all during the sound test, select **Yes**. There may be a problem with the TV. Contact Samsung's Call Centre for assistance.

**No:** If you can hear sound from the speakers, select **No**. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.

# Basic Features

- **Signal Information:** (digital channels only) An HD channel's reception quality is either perfect or the channels are unavailable. Adjust your antenna to increase signal strength.
- **Troubleshooting:** If the TV seems to have a problem, refer to this description.
  - ✎ If none of these troubleshooting tips apply, contact the Samsung customer service centre.

## Software Upgrade

**Software Upgrade** can be performed via a broadcasting signal or downloading the latest firmware from "www.samsung.com," to a USB memory device.

**Current Version** the software already installed in the TV.

✎ Software is represented as "Year/Month/Day\_Version".



 
- **By Channel:** Upgrade the software using the broadcasting signal.
  - ✎ If the function is selected during the software transmission period, software will be automatically searched and downloaded.
  - ✎ The time required to download the software is determined by the signal status.
- **Alternative Software (backup):** If there is an issue with the new firmware and it is affecting operation, you can change the software to the previous version.
  - ✎ If the software was changed, existing software is displayed.
- **Standby Mode Upgrade (Off / 1 hour later / 2 hours later / 00:00 / 02:00 / 12:00 / 14:00):** A manual upgrade will be automatically performed at selected time. Since the power of the unit is turned on internally, the screen may be turned on slightly for the LED product. This phenomenon may continue for more than 1 hour until the software upgrade is complete.

## Contact Samsung

View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centres, and how to download products and software.

## Installing the Latest Version

- **By USB:** Insert a USB drive containing the firmware upgrade file, downloaded from "www.samsung.com," into the TV. Please be careful not to disconnect the power or remove the USB drive until upgrades are complete. The TV will be turned off and on automatically after completing the firmware upgrade. When software is upgraded, video and audio settings you have made will return to their default settings. We advise you to write down your settings so that you can easily reset them after the upgrade.




# Advanced Features

## Using the My Downloads

Enjoy photos, music and/or movie files saved on a USB Mass Storage Class (MSC).


1. Press the **CONTENT** button.
2. Press the **▲ / ▼ / ◀ / ▶** button to select desired menu (**Videos**, **Photos**, **Music**), then press the **ENTER** button.

 **CONTENT** → **My Downloads** → **ENTER** 

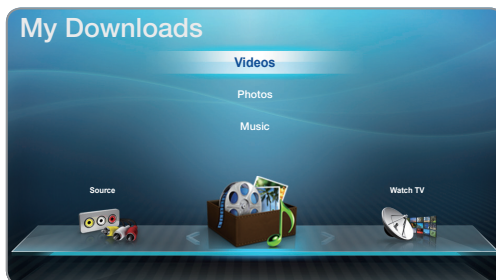

## Connecting a USB Device

 1. Turn on your TV.
2. Connect a USB device containing photo, music and/or movie files to the **USB** jack on the side of the TV.
3. When USB is connected to the TV, popup window appears. Then you can select **New device connected**.



 It might not work properly with unlicensed multimedia files.

 Need-to-Know List before using **My Downloads**

- MTP (Media Transfer Protocol) is not supported.
- The file system supports FAT16, FAT32 and NTFS.
- Certain types of USB Digital camera and audio devices may not be compatible with this TV.
- **My Downloads** only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives, Flash Card Readers and USB HDD (USB HUB are not supported). Devices should be connected directly to the TV's USB port.
- USB (HDD) is not supported.
- Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.
- Do not disconnect the USB device while it is loading.
- The higher the resolution of the image, the longer it takes to display on the screen.
- The maximum supported JPEG resolution is 15360X8640 pixels.
- For unsupported or corrupted files, the "Not Supported File Format" message is displayed.
- If the files are sorted by Basic View, up to 1000 files can be displayed in each folder.
- MP3 files with DRM that have been downloaded from a non-free site cannot be played. Digital Rights Management (DRM) is a technology that supports the creation, distribution and management of the content in an integrated and comprehensive way, including the protection of the rights and interests of the content providers, the prevention of the illegal copying of contents, as well as managing billings and settlements.
- If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be recognized or may malfunction.
- If the TV has been no input during time set in **Auto Protection Time**, the Screensaver will run.
- The power-saving mode of some external hard disk drives may be released automatically when connected to the TV.
- If a USB extension cable is used, the USB device may not be recognized or the files on the device may not be read.




# Advanced Features

- If a USB device connected to the TV is not recognized, the list of files on the device is corrupted or a file in the list is not played, connect the USB device to the PC, format the device and check the connection.
- If a file deleted from the PC is still found when **My Downloads** is run, use the “Empty the Recycle Bin” function on the PC to permanently delete the file.
- **My Downloads** only supports sequential jpeg format.
- The scene search and thumbnail functions are not supported in the Videos.

## Screen Display

Move to the desired file using the ▲ / ▼ / ◀ / ▶ buttons and then press the ENTER or ► (Play) button. The file is played. **My Downloads** screen may differ depending on the way to enter the screen.



**Information:**  
Displays the selected content category (Music, for example), device (USB drive, for example), folder/file name, page, and sort criteria.

**File List Section:**  
Displays files or folders sorted by criteria you can select.

**Contents mode / Device name:**  
You can select the desired Content Category or Device.

**Operation Buttons**

- **Yellow (Edit Mode):** Lets you select music by checking the files you want to play. Only available in Music.
- **◀ / ▶ (Page):** Move to next or previous page.
- **Tools:** Displays the option menu.
- **Return:** Move to the previous step.

## Videos

### Playing Video

1. Press the ▲ / ▼ / ◀ / ▶ button to select the desired video in the file list.
2. Press the ENTER or ► (Play) button.
  - The selected file name is displayed on the top with its playing time.
  - If video time information is unknown, play time and progress bar are not displayed.
  - During video playback, you can search using ◀ and ▶ button.
  - You can use (◀◀) (REW) and (▶▶) (FF) buttons during playback.

🔗 In this mode, you can enjoy movie clips contained on a Game, but you cannot play the Game itself.

- Supported Subtitle Formats

| Name                   | File extension | Format       |
|------------------------|----------------|--------------|
| MPEG-4 time-based text | .txt           | XML          |
| SAMI                   | .smi           | HTML         |
| SubRip                 | .srt           | string-based |
| SubViewer              | .sub           | string-based |
| Micro DVD              | .sub or .txt   | string-based |



- The displayed image may differ depending on the model.

# Advanced Features

- Supported Video Formats

| File Extension        | Container  | Video Codec                 | Resolution | Frame rate (fps) | Bit rate (Mbps) | Audio Codec                            |
|-----------------------|------------|-----------------------------|------------|------------------|-----------------|--|
| *.avi<br>*.mkv        | AVI<br>MKV | Divx 3.11 / 4.x / 5.1 / 6.0 | 1920x1080  | 6 ~ 30           | 8               | MP3 / AC3 / LPCM /<br>ADPCM / DTS Core |
|                       |            | XviD                        | 1920x1080  | 6 ~ 30           | 8               |  |
|                       |            | H.264 BP / MP / HP          | 1920x1080  | 6 ~ 30           | 25              |  |
|                       |            | MPEG4 SP / ASP              | 1920x1080  | 6 ~ 30           | 8               |  |
|                       |            | Motion JPEG                 | 640x480    | 6 ~ 30           | 8               |  |
| *.asf                 | ASF        | Divx 3.11 / 4.x / 5.1 / 6.0 | 1920x1080  | 6 ~ 30           | 8               | MP3 / AC3 / LPCM /<br>ADPCM / WMA      |
|                       |            | XviD                        | 1920x1080  | 6 ~ 30           | 8               |  |
|                       |            | H.264 BP / MP / HP          | 1920x1080  | 6 ~ 30           | 25              |  |
|                       |            | MPEG4 SP / ASP              | 1920x1080  | 6 ~ 30           | 8               |  |
|                       |            | Motion JPEG                 | 640x480    | 6 ~ 30           | 8               |  |
| *.wmv                 | ASF        | Window Media Video v9       | 1920x1080  | 6 ~ 30           | 25              | WMA                                    |
| *.mp4                 | MP4        | H.264 BP / MP / HP          | 1920x1080  | 6 ~ 30           | 25              | MP3 / ADPCM / AAC                      |
|                       |            | MPEG4 SP / ASP              | 1920x1080  | 6 ~ 30           | 8               |  |
|                       |            | XVID                        | 1920x1080  | 6 ~ 30           | 8               |  |
| *.3gp                 | 3GPP       | H.264 BP / MP / HP          | 1920x1080  | 6 ~ 30           | 25              | ADPCM / AAC / HE-AAC                   |
|                       |            | MPEG4 SP / ASP              | 1920x1080  | 6 ~ 30           | 8               |  |
| *.vro<br>*.vob        | VRO<br>VOB | MPEG1                       | 1920x1080  | 24 / 25 / 30     | 30              | AC3 / MPEG / LPCM                      |
|                       |            | MPEG2                       | 1920x1080  | 24 / 25 / 30     | 30              |  |
| *.mpg<br>*.mpeg       | PS         | MPEG1                       | 1920x1080  | 24 / 25 / 30     | 30              | AC3 / MPEG / LPCM / AAC                |
|                       |            | MPEG2                       | 1920x1080  | 24 / 25 / 30     | 30              |  |
|                       |            | H.264                       | 1920x1080  | 6 ~ 30           | 25              |  |
| *.ts<br>*.tp<br>*.trp | TS         | MPEG2                       | 1920x1080  | 24 / 25 / 30     | 30              | AC3 / AAC / MP3 / DD+ /<br>HE-AAC      |
|                       |            | H.264                       | 1920x1080  | 6 ~ 30           | 25              |  |
|                       |            | VC1                         | 1920x1080  | 6 ~ 30           | 25              |  |

## Other Restrictions



### NOTE







- If there are problems with the contents of a codec, the codec will not be supported.
- If the information for a Container is incorrect and the file is in error, the Container will not be able to play correctly.
- Sound or video may not work if the contents have a standard bitrate/frame rate above the compatible Frame/sec listed in the table above.
- If the Index Table is in error, the Seek (Jump) function is not supported.
- Some USB/digital camera devices may not be compatible with the player.


| Video Decoder  | Audio Decoder   |
|--|---|
| <ul style="list-style-type: none"> <li>• Supports up to H.264, Level 4.1</li> <li>• H.264 FMO / ASO / RS, VC1 SP / MP / AP L4 and AVCHD are not supported.</li> <li>• XVID, MPEG4 SP, ASP : <ul style="list-style-type: none"> <li>– Below 1280 x 720: 60 frame max</li> <li>– Above 1280 x 720: 30 frame max</li> </ul> </li> <li>• GMC 2 over is not supported.</li> </ul> | <ul style="list-style-type: none"> <li>• Supports up to WMA 7, 8, 9, STD</li> <li>• WMA 9 PRO does not support 2 channel excess multi channel or lossless audio.</li> <li>• WMA sampling rate 22050Hz mono is not supported.</li> </ul> |

# Advanced Features

## Music



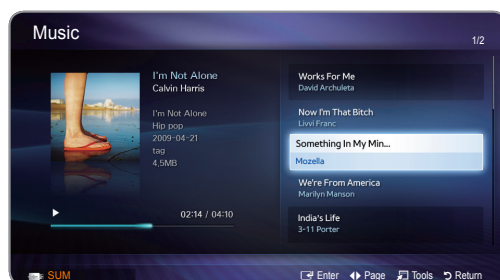

### Playing Music

1. Press the ▲ / ▼ / ◀ / ▶ button to select the desired **Music** in the file list.
  2. Press the ENTER  button or  (Play) button.
    - You can use  (REW) and  (FF) buttons during playback.
-  Only displays the files with MP3 and PCM file extension. Other file extensions are not displayed, even if they are saved on the same USB device.
-  If the sound is abnormal when playing MP3 files, adjust the **Equalizer** in the **Sound** menu. (An over-modulated MP3 file may cause a sound problem.)





 


- The displayed image may differ depending on the model.


### Playing selected music

1. Press the  (**Edit Mode**) button.
2. Select the desired music.
  -  The  mark appears to the left of the selected files.
3. Press the **TOOLS** button and select **Play Selected Contents**.
  -  You can select or deselect all music pressing the **Select All** / **Deselect All**.

## Photos

### Viewing a Photo (or Slide Show)

1. Press the ▲ / ▼ / ◀ / ▶ button to select the desired photo in the file list.
  2. Press the ENTER  button.
    - When a selected photo is displayed, press the ENTER  button to start the slide show.
    - During the slide show, all files in the file list will be displayed in order.
    - When you press the  (Play) button in the file list, slide show will be started immediately.
-  Music files can be automatically played during the Slide Show if the **Background Music** is set to **On**.
-  The **Background Music** cannot be changed until the BGM has finished loading.

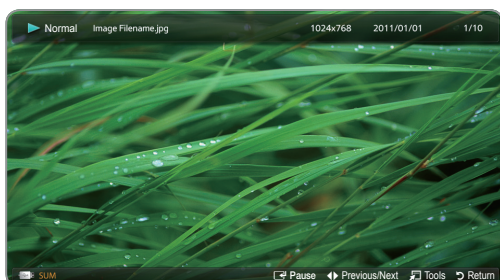

# Advanced Features

## My Downloads - Additional Functions

### Videos/Music/Photos Play Option menu

During playing a file, press the TOOLS button.

| Category                            | Operations  | Videos | Music | Photos |
|-------------------------------------|---|--------|-------|--------|
| Title Search                        | You can move the other file directly.   | ✓      |       |        |
| Time Search                         | You can search the video using ◀ and ▶ button at one minute interval or entering the number directly.   | ✓      |       |        |
| Shuffle Mode                        | You can play the music randomly.  |        | ✓     |        |
| Repeat Mode                         | You can play movie and music files repeatedly.  | ✓      | ✓     |        |
| Picture Size                        | You can adjust the picture size to your preference.   | ✓      |       |        |
| Picture Mode                        | You can adjust the picture setting.   | ✓      |       | ✓      |
| Sound Mode                          | You can adjust the sound setting.   | ✓      | ✓     | ✓      |
| Subtitle Language                   | You can view a subtitle. You can select a specific language if the subtitle file contains multiple languages.   | ✓      |       |        |
| Subtitle Setting                    | You can play the video with Subtitles. This function only works if the subtitles are the same file name as the video.   | ✓      |       |        |
| Audio                               | You can enjoy video in one of supported languages as required. The function is only enabled when stream-type files which support multiple audio formats are played. | ✓      |       |        |
| Start Slide Show / Pause Slide Show | You can start or pause a Slide Show.  |        |       | ✓      |
| Slide Show Speed                    | You can select the slide show speed during the slide show.  |        |       | ✓      |
| Background Music                    | You can on/off background music when watching a Slide Show.   |        |       | ✓      |
| Background Music Setting            | You can select background music when watching a Slide Show.   |        |       | ✓      |
| Zoom                                | You can zoom into images in full screen mode.   |        |       | ✓      |
| Rotate                              | You can rotate images in full screen mode.  |        |       | ✓      |
| Information                         | You can see detailed information about the played file.   | ✓      | ✓     | ✓      |

# Advanced Features


## Anynet+ (HDMI-CEC)

### What is Anynet+?

Anynet+ is a function that enables you to control all connected Samsung devices that support Anynet+ with your Samsung TV's remote. The Anynet+ system can be used only with Samsung devices that have the Anynet+ feature. To be sure your Samsung device has this feature, check if there is an Anynet+ logo on it.

- You can only control Anynet+ devices using the TV remote control, not the buttons on the TV.
- The TV remote control may not work under certain conditions. If this occurs, reselect the Anynet+ device.
- The Anynet+ functions do not operate with other manufacturers' products.
- For the method of connecting external devices, refer to the supported user manual.

### To connect to Home Theatre

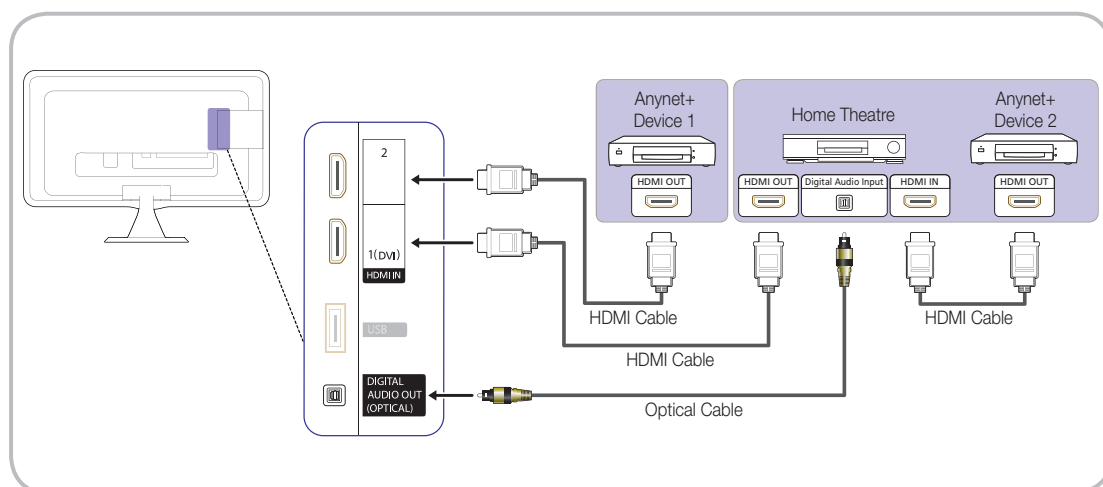

1. Connect the HDMI IN (1 (DVI), 2) jack on the TV and the HDMI OUT jack of the corresponding Anynet+ device using an HDMI cable.
2. Connect the HDMI IN jack of the home theatre and the HDMI OUT jack of the corresponding Anynet+ device using an HDMI cable.



### NOTE

- Connect the Optical cable between the **DIGITAL AUDIO OUT (OPTICAL)** jack on your TV and the Digital Audio Input on the Home Theatre.
- When following the connection above, the Optical jack only outputs 2 channel audio. You will only hear sound from the Home Theatre's Front, Left and Right speakers and the subwoofer. If you want to hear 5.1 channel audio, connect the **DIGITAL AUDIO OUT (OPTICAL)** jack on the DVD / Satellite Box (i.e. Anynet Device 1 or 2) directly to the Amplifier or Home Theatre, not the TV.
- You can connect only one Home Theatre.
- You can connect an Anynet+ device using the HDMI cable. Some HDMI cables may not support Anynet+ functions.
- Anynet+ works when the AV device supporting Anynet+ is in the standby or on status.
- Anynet+ supports up to 10 AV devices in total. Note that you can connect up to 3 devices of the same type.

# Advanced Features

## Anynet+ Menu

The Anynet+ menu changes depending on the type and status of the Anynet+ devices connected to the TV.

| Anynet+ Menu                       | Description  |
|------------------------------------|--|
| <b>View TV</b>                     | Changes Anynet+ mode to TV broadcast mode.   |
| <b>Device List</b>                 | Shows the Anynet+ device list.   |
| <b>Recording:</b> (*recorder)      | Starts recording immediately using the recorder. (This is only available for devices that support the recording function.)   |
| (device_name) <b>MENU</b>          | Shows the connected device menus. E.g. If a DVD recorder is connected, the disc menu of the DVD recorder will appear.  |
| (device_name) <b>Tools</b>         | Shows the tools menu of the connected device. E.g. If a DVD recorder is connected, the play menu of the DVD recorder will appear.<br> Depending on the device, this menu may not be available.  |
| (device_name) <b>Title Menu</b>    | Shows the title menu of the connected device. E.g. If a DVD recorder is connected, the title menu of the DVD recorder will appear.<br> Depending on the device, this menu may not be available. |
| <b>Stop Recording:</b> (*recorder) | Stops recording.   |
| <b>Receiver</b>                    | Sound is played through the receiver.  |

If more than one recording device is connected, they are displayed as (\*recorder) and if only one recording device is connected, it will be represented as (\*device\_name).


## Setting Up Anynet+




MENU  → System → Anynet+ (HDMI-CEC) → ENTER 

### ■ Anynet+ (HDMI-CEC) (Off / On)

To use the Anynet+ Function, **Anynet+ (HDMI-CEC)** must be set to **On**.





 When the **Anynet+ (HDMI-CEC)** function is disabled, all the Anynet+ related operations are deactivated.

### ■ Auto Turn Off (No / Yes): Setting an Anynet+ Device to turn off automatically when the TV is turned off.

 If **Auto Turn Off** is set to **Yes**, running external devices will turn off at the same time as the TV powers off. However, a device may not turn off if recording is in progress.

 May not be enabled depending on the device.

## Switching between Anynet+ Devices

- Press the **TOOLS** button to select **Anynet+ (HDMI-CEC)**. And then press the **ENTER**  button to select **Device List**.  
 If you cannot find a device you want, press the **▲** button to refresh the list.
- Select a device and press the **ENTER**  button. You can switch to the selected device.  
 The **Device List** menu will only appear when you set **Anynet+ (HDMI-CEC)** to **On** in the **System** menu.
  - Switching to the selected device may take up to 2 minutes. You cannot cancel the operation during the switching operation.
  - If you have selected external input mode by pressing the **SOURCE** button, you cannot use the Anynet+ function. Make sure to switch to an Anynet+ device by using the **Device List**.



# Advanced Features

## Recording





---

You can make a recording of a TV Programme using a Samsung recorder.

1. Select **Recording**.

-  When there are more than two recording devices
  - When multiple recording devices are connected, the recording devices are listed. Select one recording device in the **Device List**.
-  When the recording device is not displayed, press the **▲** button in the **Device List** menu to search devices.

2. Press the **EXIT** button to exit.

-  You can record the source streams by selecting **Recording: (device\_name)**.
-  Pressing the  (REC) button will record whatever you are currently watching. If you are watching video from another device, the video from the device is recorded.
-  Before recording, check whether the antenna jack is properly connected to the recording device. To properly connect an antenna to a recording device, refer to the recording device's users manual.




## Listening through a Receiver

---

You can listen to sound through a receiver (i.e Home Theatre) instead of the **TV Speaker**.

1. Select **Receiver** and set to **On**.

2. Press the **EXIT** button to exit.

-  If your receiver supports audio only, it may not appear in the device list.
-  The receiver will work when you have properly connected the optical in jack of the receiver to the **DIGITAL AUDIO OUT (OPTICAL)** jack of the TV.
-  When the receiver (i.e Home Theatre) is set to **On**, you can hear sound output from the TV's Optical jack. When the TV is displaying a DTV (aerial) signal, the TV will send out 5.1 channel sound to the receiver. When the source is a digital component such as a DVD and is connected to the TV via HDMI, only 2 channel sound will be heard from the receiver.

# Advanced Features

## Troubleshooting for Anynet+

| Problem  | Possible Solution  |
|--|--|
| Anynet+ does not work.   | <ul style="list-style-type: none"> <li>Check if the device is an Anynet+ device. The Anynet+ system supports Anynet+ devices only.</li> <li>Only one receiver (home theatre) can be connected.</li> <li>Check if the Anynet+ device power cord is properly connected.</li> <li>Check the Anynet+ device's Video/Audio/HDMI cable connections.</li> <li>Check whether <b>Anynet+ (HDMI-CEC)</b> is set to <b>On</b> in the Anynet+ setup menu.</li> <li>Check whether the TV remote control is in TV mode.</li> <li>Check whether the remote control is Anynet+ compatible.</li> <li>Anynet+ doesn't work in certain situations. (Searching channels, operating <b>My Downloads</b> or <b>Plug &amp; Play</b> (Initial setup), etc.)</li> <li>When connecting or removing the HDMI cable, please make sure to search devices again or turn your TV off and on again.</li> <li>Check if the Anynet+ Function of Anynet+ device is set on.</li> </ul> |
| I want to start Anynet+.   | <ul style="list-style-type: none"> <li>Check if the Anynet+ device is properly connected to the TV and check if the <b>Anynet+ (HDMI-CEC)</b> is set to <b>On</b> in the Anynet+ Setup menu.</li> <li>Press the <b>TOOLS</b> button to display the Anynet+ menu and select a menu you want.</li> </ul>   |
| I want to exit Anynet+.  | <ul style="list-style-type: none"> <li>Select <b>View TV</b> in the Anynet+ menu.</li> <li>Press the <b>SOURCE</b> button on the TV remote control and select a device other than Anynet+ devices.</li> <li>Press <b>▲P▼</b>, and <b>PRE-CH</b> to change the TV mode. (Note that the channel button operates only when a tuner-embedded Anynet+ device is not connected.)</li> </ul>  |
| The message "Connecting to Anynet+ device..." appears on the screen. | <ul style="list-style-type: none"> <li>You cannot use the remote control when you are configuring Anynet+ or switching to a view mode.</li> <li>Use the remote control when the Anynet+ setting or switching to view mode is complete.</li> </ul>  |
| The Anynet+ device does not play.                                    | <ul style="list-style-type: none"> <li>You cannot use the play function when <b>Plug &amp; Play</b> (Initial setup) is in progress.</li> </ul>   |
| The connected device is not displayed.                               | <ul style="list-style-type: none"> <li>Check whether or not the device supports Anynet+ functions.</li> <li>Check whether or not the HDMI cable is properly connected.</li> <li>Check whether <b>Anynet+ (HDMI-CEC)</b> is set to <b>On</b> in the Anynet+ setup menu.</li> <li>Search Anynet+ devices again.</li> <li>You can connect an Anynet+ device using the HDMI cable only. Some HDMI cables may not support Anynet+ functions.</li> <li>If connection is terminated because there has been a power interruption or the HDMI cable has been disconnected, please repeat the device scan.</li> </ul>  |
| The TV Programme cannot be recorded.                                 | <ul style="list-style-type: none"> <li>Check whether the antenna jack on the recording device is properly connected.</li> </ul>  |
| The TV sound is not output through the receiver.                     | <ul style="list-style-type: none"> <li>Connect the optical cable between TV and the receiver.</li> </ul>   |




# Other Information

## Installing the Device Driver

If you install the device driver, you can set up the appropriate resolution and frequency for the product. The device driver is included on the CD supplied with the product. If the supplied drive file is corrupted, please visit the Samsung Electronics website ([www.samsung.com](http://www.samsung.com)), and download the driver.

1. Insert the driver installation CD into the CD-ROM drive.
2. Click on Windows Driver.
3. Complete the remaining installation steps according to the instructions displayed on the screen.
4. Select the model of your product from the model list.

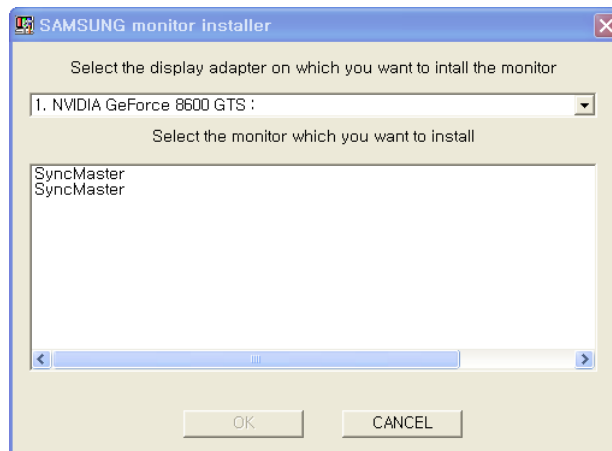








5. Check if the appropriate resolution and screen refresh rate are displayed in the Control Panel settings. For more information, refer to the document about the Windows operating system.


# Other Information



 
 
 
## Analogue Channel Teletext Feature

The index page of the Teletext service gives you information on how to use the service. For Teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.


 You can change Teletext pages by pressing the numeric buttons on the remote control.

     - 1  (Teletext on/mix/off): Activates the Teletext mode for the current channel. Press the button twice to overlap the Teletext mode with the current broadcasting screen. Press it one more time to exit teletext.
- 2  (store): Stores the Teletext pages.
- 3  (size): Displays the teletext on the upper half of the screen in double-size. To move the text to the lower half of the screen, press it again. For normal display, press it once again.
- 4  (hold): Holds the display at the current page, in the case that there are several secondary pages that follow automatically. To undo, press it again.
- 5 Colour buttons (red, green, yellow, blue): If the FASTEXT system is used by the broadcasting company, the different topics on a Teletext page are colour-coded and can be selected by pressing the coloured buttons. Press the colour corresponding to the topic of your choice. A new colour-coded page is displayed. Items can be selected in the same way. To display the previous or next page, press the corresponding coloured button.
- 6  (mode): Selects the Teletext mode (LIST/ FLOF).  
If pressed during LIST mode, switches the mode to List save mode. In List save mode, you can save a Teletext page into a list using the  (store) button.
- 7  (sub-page): Displays the available sub-page.

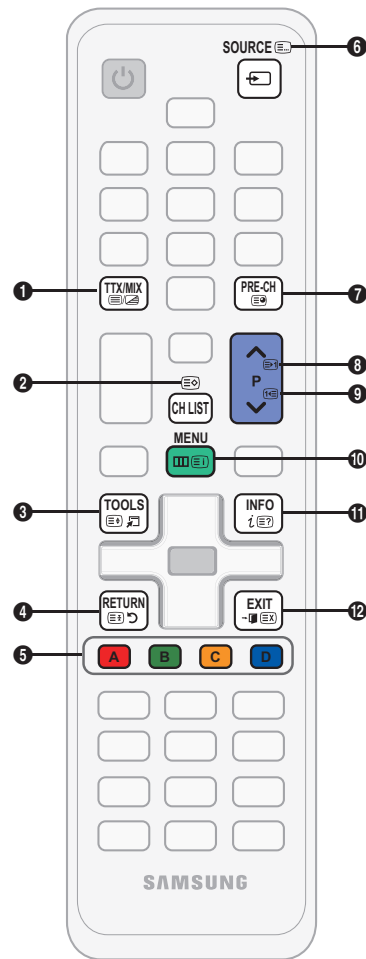

- 8  (page up): Displays the next Teletext page.
- 9  (page down): Displays the previous Teletext page.
- 10  (index): Displays the index (contents) page at any time while you are viewing Teletext.
- 11  (reveal): Displays the hidden text (answers to quiz games, for example). To display the normal screen, press it again.
- 12  (cancel): Shrinks the Teletext display to overlap with the current broadcast.

### Typical Teletext page

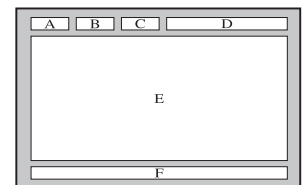


| Part | Contents                                   |
|------|--|
| A    | Selected page number.                      |
| B    | Broadcasting channel identity.             |
| C    | Current page number or search indications. |
| D    | Date and time.                             |
| E    | Text.                                      |
| F    | Status information. FASTEXT information.   |

# Other Information


## Attaching a Wall Mount/Desktop Stand

### Preparing before installing Wall-Mount/Desktop Stand

1. Turn the product off and unplug the power cord from the wall outlet.
2. Place a soft cloth or cushion on a flat surface to protect the panel and place the product face down.
3. Separate the screw at the rear of the product.
4. Hold the main body of the product with your hand as shown by the figure. Pull the stand in the direction of the arrow as shown in the figure to separate it.

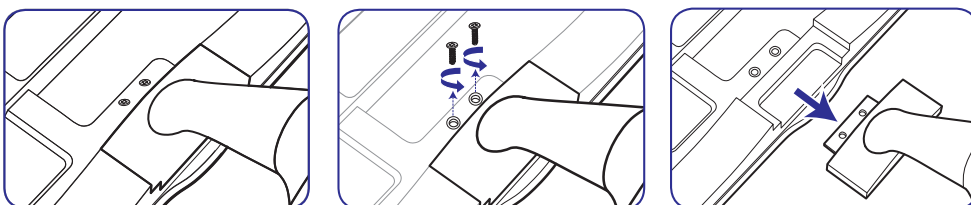

### Attaching a Wall Mount/Desktop Stand

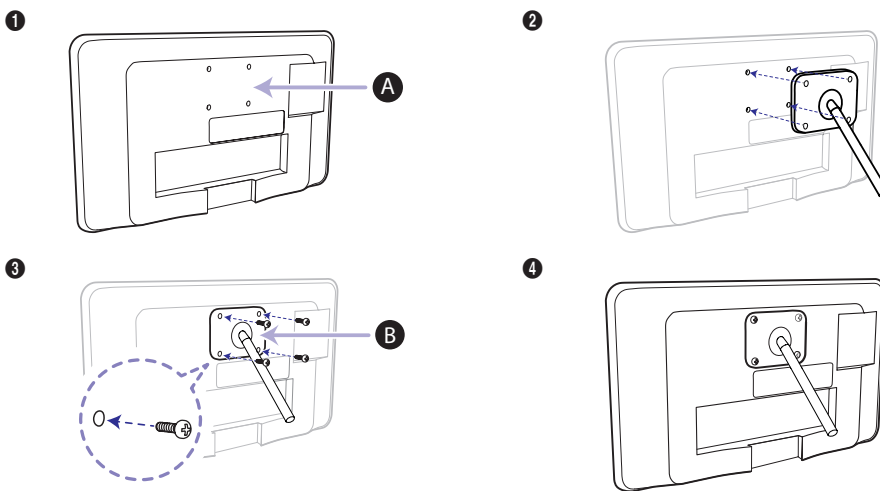

- A** Wall/Desktop Stand Mount  
**B** Wall mount kit/desktop stand (not supplied)

5. Align wall mount/desktop stand to the Monitor/TV and firmly fix the wall mount/desktop stand by fastening the screw.
6. Align the groove of the part of the product that is to be connected to the stand with the groove in the stand (desk-top stand, wall mount stand or another stand) and firmly fix the stand by fastening the screw.

### NOTE


- If you use screws that are longer than the standard specifications, the inside of the product may be damaged.
- For wall mounts that are not compatible with the standard VESA specifications, the length of the screw may differ depending on the corresponding specifications.

## Other Information

- Avoid using screws that are incompatible with the standard VESA specifications and avoid assembling them using excessive force. This may result in damage to the product or injury due to the product falling. Samsung shall not be held liable for any damage or injury.
- Samsung shall not be held liable for any damage to the product or injury caused by using a wall mount/desktop stand that is not compatible with the specifications or due to an installation not performed by an authorized installation engineer.
- When installing the product using a wall mount, purchase a wall mount that provides at least 10 cm (3.93 inches) of space from the wall.
- Use the wall mount according to the international specifications.

### Assembling the Cables

Use the Cable Holder to hide the cables behind the stand.

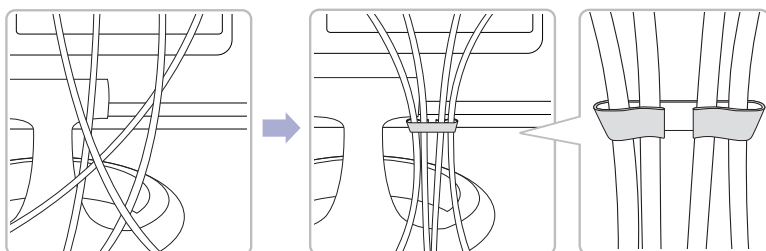

The colour and the appearance may differ depending on the product, and the specifications are subject to change without prior notice to improve the performance.


### Anti-theft Kensington Lock

The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. The appearance and locking method may differ from the illustration depending on the manufacturer. Refer to the manual provided with the Kensington Lock for additional information on proper use.

Please find a “K” icon on the rear of the TV. A kensington slot is beside the “K” icon.

#### To lock the product, follow these steps:

1. Wrap the Kensington lock cable around a large, stationary object such as desk or chair.
2. Slide the end of the cable with the lock attached through the looped end of the Kensington lock cable.
3. Insert the locking device into the Kensington slot on the product (❶).
4. Lock the lock.

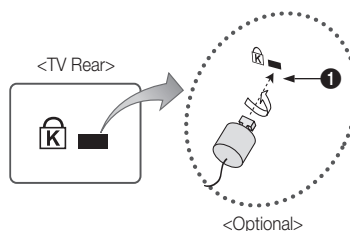

These are general instructions. For exact instructions, see the User manual supplied with the locking device.

The locking device has to be purchased separately.

The location of the Kensington slot may be different depending on the TV model.

# Other Information

## Troubleshooting

 
If you have any questions about the TV, first refer to this list. If none of these troubleshooting tips apply, please visit "www.samsung.com," then click on Support, or contact the call centre listed on the back-cover of this manual.


| Issues   | Solutions and Explanations   |
|--|--|
| PC Connection  |  |
| A <b>Mode Not Supported</b> message appears.                                 | <ul style="list-style-type: none"> <li>Set your PC's output resolution and frequency so they match the resolutions supported by the TV (p. 20).</li> </ul>   |
| PC is always shown on the source list, even if a PC is not connected.        | <ul style="list-style-type: none"> <li>This is normal; "PC" is always shown on the source list, regardless of whether a PC is connected.</li> </ul>  |
| The video is OK but there is no audio.                                       | <ul style="list-style-type: none"> <li>If you are using a HDMI connection, check the audio output setting on your PC.</li> </ul>   |
| Picture Quality  | <p>First of all, please perform the <b>Picture Test</b> and confirm that your TV is properly displaying test image. (go to MENU - <b>Support</b> - <b>Self Diagnosis</b> - <b>Picture Test</b>) (p. 34)</p> <p>If the test image is properly displayed, the poor picture may caused by the source or signal.</p>   |
| The TV image does not look as good as it did in the store.                   | <ul style="list-style-type: none"> <li>If you have an analogue cable/set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality.</li> <li>Cable/Satellite subscribers: Try HD stations from the channel line up.</li> <li>Antenna connection: Try HD stations after performing Auto programme.</li> <li>Many HD channels are up scaled from SD(Standard Definition) contents.</li> <li>Adjust the Cable/Set top box video output resolution to 1080i or 720p.</li> <li>Make sure you are watching the TV at the minimum recommended distance based on the size and definition of the signal.</li> </ul> |
| The picture is distorted: macro block error, small block, dots, pixelization | <ul style="list-style-type: none"> <li>Compression of video contents may cause picture distortion especially in fast moving pictures such as sports and action movies.</li> <li>Low signal level or bad quality can cause picture distortion. This is not a TV issue.</li> <li>Mobile phones used close to the TV (cca up to 1m) may cause noise in picture on analogue and digital TV.</li> </ul>   |
| Colour is wrong or missing.  | <ul style="list-style-type: none"> <li>If you're using a component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause colour problems or a blank screen.</li> </ul>   |
| There is poor colour or brightness.  | <ul style="list-style-type: none"> <li>Adjust the <b>Picture</b> options in the TV menu. (go to <b>Picture</b> mode / <b>Colour</b> / <b>Brightness</b> / <b>Sharpness</b>) (p. 26)</li> <li>Adjust <b>Energy Saving</b> option in the TV menu. (go to MENU - <b>System</b> - <b>Eco Solution</b> - <b>Energy Saving</b>) (p. 32)</li> <li>Try resetting the picture to view the default picture settings. (go to MENU - <b>Picture</b> - <b>Reset Picture</b>) (p.29)</li> </ul>  |
| There is a dotted line on the edge of the screen.                            | <ul style="list-style-type: none"> <li>If the picture size is set to <b>Screen Fit</b>, change it to <b>16:9</b> (p. 26).</li> <li>Change cable/set top box resolution.</li> </ul>   |
| The picture is black and white.  | <ul style="list-style-type: none"> <li>If you are using an AV composite input, connect the video cable (yellow) to the Green jack of component input 1 on the TV.</li> </ul>   |
| When changing channels, the picture freezes or is distorted or delayed.      | <ul style="list-style-type: none"> <li>If connected with a cable box, please try to reset the cable box. Reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes.</li> <li>Set the output resolution of the cable box to 1080i or 720p.</li> </ul>  |
| Sound Quality  | <p>First of all, please perform the <b>Sound Test</b> to confirm that your TV audio is properly operating. (go to MENU - <b>Support</b> - <b>Self Diagnosis</b> - <b>Sound Test</b>) (p. 34)</p> <p>If the audio is OK, the sound problem may caused by the source or signal.</p>  |
| There is no sound or the sound is too low at maximum volume.                 | <ul style="list-style-type: none"> <li>Please check the volume the of external device connected to your TV.</li> </ul>   |
| The picture is good but there is no sound.                                   | <ul style="list-style-type: none"> <li>Set the <b>Speaker Select</b> option to <b>TV Speaker</b> in the sound menu (p. 30).</li> <li>If you are using an external device, make sure the audio cables are connected to the correct audio input jacks on the TV.</li> <li>If you are using an external device, check the device's audio output option (ex. you may need to change your cable box's audio option to HDMI when you have a HDMI connected to your TV).</li> <li>If you are using a DVI to HDMI cable, a separate audio cable is required.</li> <li>If your TV has a headphone jack, make sure there is nothing plugged into it.</li> </ul>                    |
| The speakers are making an inappropriate noise.                              | <ul style="list-style-type: none"> <li>Check the cable connections. Make sure a video cable is not connected to an audio input.</li> <li>For antenna or cable connections, check the signal strength. Low signal level may cause sound distortion.</li> </ul>  |

# Other Information


| Issues  | Solutions and Explanations  |
|---|---|
| No Picture, No Video  |   |
| The TV won't turn on.   | <ul style="list-style-type: none"> <li>Make sure the AC power cord is securely plugged in to the wall outlet and the TV.</li> <li>Make sure the wall outlet is working.</li> <li>Try pressing the <b>POWER</b> button on the TV to make sure the problem is not the remote. If the TV turns on, refer to "The remote control does not work" below.</li> </ul>   |
| The TV turns off automatically.   | <ul style="list-style-type: none"> <li>Ensure the <b>Sleep Timer</b> is set to <b>Off</b> in the <b>System</b> menu (p. 31).</li> <li>If your PC is connected to the TV, check your PC power settings.</li> <li>Make sure the AC power cord is plugged in securely to the wall outlet and the TV.</li> <li>When watching TV from an antenna or cable connection, the TV will turn off after 10 ~ 15 minutes if there is no signal.</li> </ul>   |
| There is no picture/Video.  | <ul style="list-style-type: none"> <li>Check cable connections (remove and reconnect all cables connected to the TV and external devices).</li> <li>Set your external devices' (Cable/Set top Box, DVD, Blu-ray etc) video outputs to match the connections to the TV input. For example, if an external device's output is HDMI, it should be connect to an HDMI input on the TV.</li> <li>Make sure your connected devices are powered on.</li> <li>Be sure to select the TV's correct source by pressing the <b>SOURCE</b> button on the TV remote.</li> </ul> |
| RF(Cable/Antenna) Connection  |   |
| The TV is not receiving all channels.   | <ul style="list-style-type: none"> <li>Make sure the Antenna cable is connected securely.</li> <li>Please try <b>Plug &amp; Play</b> (Initial setup) to add available channels to the channel list. Go to <b>MENU - System - Plug &amp; Play</b> (Initial setup) and wait for all available channels to be stored (p. 15).</li> <li>Verify the Antenna is positioned correctly.</li> </ul>  |
| The picture is distorted: macro block error<br>small block, dots, pixelization            | <ul style="list-style-type: none"> <li>Compression of video contents may cause picture distortion, especially with fast moving pictures such as sports and action movies.</li> <li>A low signal can cause picture distortion. This is not a TV issue.</li> </ul>  |
| Others  |   |
| The picture won't display in full screen.   | <ul style="list-style-type: none"> <li>HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents.</li> <li>Black bars on the top and bottom will appear during movies that have aspect ratios different from your TV.</li> <li>Adjust the picture size options on your external device or TV to full screen.</li> </ul>   |
| The remote control does not work.   | <ul style="list-style-type: none"> <li>Replace the remote control batteries with the poles (+/-) in the right direction.</li> <li>Clean the sensor's transmission window on the remote.</li> <li>Try pointing the remote directly at the TV from 5~6 feet away.</li> </ul>  |
| The cable/set top box remote control doesn't turn the TV on or off, or adjust the volume. | <ul style="list-style-type: none"> <li>Programme the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set user manual for the SAMSUNG TV code.</li> </ul>   |
| A "Mode Not Supported" message appears.   | <ul style="list-style-type: none"> <li>Check the supported resolution of the TV, and adjust the external device's output resolution accordingly (p. 27).</li> </ul>   |
| There is a plastic smell from the TV.   | <ul style="list-style-type: none"> <li>This smell is normal and will dissipate over time.</li> </ul>  |
| The TV <b>Signal Information</b> is unavailable in the Self Diagnostic Test menu.         | <ul style="list-style-type: none"> <li>This function is only available with digital channels from an Antenna / RF/Coax connection (p. 35).</li> </ul>   |
| The TV is tilted to the side.   | <ul style="list-style-type: none"> <li>Remove the base stand from the TV and reassemble it.</li> </ul>  |
| There are difficulties assembling the stand base.   | <ul style="list-style-type: none"> <li>Make sure the TV is placed on a flat surface. If you can not remove the screws from the TV, use a magnetized screw driver.</li> </ul>  |

# Other Information

| Issues   | Solutions and Explanations  |
|--|---|
| The channel menu is greyed out. (unavailable)  | <ul style="list-style-type: none"> <li>The <b>Channel</b> menu is only available when the TV source is selected.</li> </ul>   |
| Your settings are lost after 30 minutes or every time the TV is turned off.                                  | <ul style="list-style-type: none"> <li>If the TV is in the <b>Store Demo</b> mode, it will reset audio and picture settings every 30 minutes. Change the settings from <b>Store Demo</b> mode to <b>Home Use</b> mode in the <b>Plug &amp; Play</b> (Initial setup) procedure. Press the <b>SOURCE</b> button to select <b>TV</b> mode, and go to <b>MENU</b> → <b>System</b> → <b>Plug &amp; Play</b> (Initial setup) → <b>ENTER</b>  (p. 15).</li> </ul> |
| You have intermittent loss of audio or video.  | <ul style="list-style-type: none"> <li>Check the cable connections and reconnect them.</li> <li>Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree connectors.</li> </ul>   |
| You see small particles when you look closely at the edge of the frame of the TV.                            | <ul style="list-style-type: none"> <li>This is part of the product's design and is not a defect.</li> </ul>   |
| The <b>PIP</b> menu is not available.  | <ul style="list-style-type: none"> <li><b>PIP</b> functionality is only available when you are using a HDMI, PC or components source (p. 34).</li> </ul>  |
| The message "Scramble signal" or "Weak Signal/No Signal" appears.  | <ul style="list-style-type: none"> <li>If you are using a CAM CARD (CI/CI+), check that it is installed into the common interface slot.</li> <li>If there is still a problem, pull the CAM CARD out of the TV and insert it into the slot again.</li> </ul>   |
| You turned the TV off 45 minutes ago, and it turned on again.  | <ul style="list-style-type: none"> <li>It is normal. The TV operates the OTA (Over The Aerial) function itself to upgrade firmware downloaded whilst your watching TV.</li> </ul>   |
| There are recurrent picture/sound issues.  | <ul style="list-style-type: none"> <li>Check and change the signal/source.</li> </ul>   |
| A reaction may occur between the rubber cushion pads on the base stand and the top finish of some furniture. | <ul style="list-style-type: none"> <li>To prevent this, use felt pads on any surface of the TV that comes in direct contact with furniture.</li> </ul>  |


 This panel uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.skrhk

## Storage and Maintenance

 If you attached some stickers on the TV screen, it remains some debris after removing the sticker. Please clean it to watch TV.



Do not spray water or a cleaning agent directly onto the product. Any liquid that goes into the product may cause a failure, fire, or electric shock.

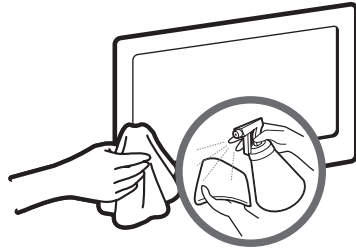


Clean the product with a soft cloth dapped in a small amount of water.

# Other Information

## Licence



TheaterSound, SRS and the  symbol are trademarks of SRS Labs, Inc. TheaterSound technology is incorporated under licence from SRS Labs, Inc.



Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under licence under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks. & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product Includes software. © DTS, Inc. All Rights Reserved.



DivX Certified to play DivX video up to HD 1080p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content.

To generate the registration code, locate the DivX VOD section in the device setup menu.

Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD. Pat. 7,295,673; 7,460,688; 7,519,274

### Open source licence notice

In the case of using open source software, Open Source licence are available on the product menu. Open Source Licence Notice is written only English.

## WEEE



### Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

#### (Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



### Correct disposal of batteries in this product

#### (Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment. To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



# Other Information

## Specifications

|                              |           |   |
|------------------------------|-----------|---|
| Environmental considerations | Operating | Temperature : 50°F ~ 104°F (10°C ~ 40°C)<br>Humidity : 10 % ~ 80 %, non-condensing                                    |
|                              | Storage   | Temperature : -4°F ~ 113°F (-20°C ~ 45°C)<br>Humidity : 5 % ~ 95 %, non-condensing                                    |
| Tilt                         |           | -2° ~ 22°   |
| TV System                    |           | Analogue: B/G, D/K, L, I (Depending on your country selection)<br>Digital: DVB-T/DVB-C                                |
| Colour/Video System          |           | Analogue: PAL, SECAM, NTSC-4.43, NTSC-3.58, PAL60<br>Digital: MPEG-2 MP@ML, MPEG-4, H.264/AVC MP@L3, MP@L4.0, HP@L4.0 |
| Sound System                 |           | BG. OK NICAM. MPEGI   |
| HDMI IN                      |           | Video: 1080 24p, 1080p, 1080i, 720p, 576p, 576i, 480p, 480i<br>Audio: 2Ch Linear PCM 32/44.1/48kHz, 16/20/24bits.     |

| Model Name             |                 | T19A350                  | T20A350                  | T22A350                  | T23A350                  | T24A350                  |
|------------------------|-----------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Screen Size (Diagonal) |                 | 18.5 inches (47 cm)      | 20 inches (50 cm)        | 21.5 inches (54 cm)      | 23 inches (58 cm)        | 24 inches (61 cm)        |
| Display Resolution     |                 | 1360 x 768 @ 60Hz        | 1600 x 900 @ 60Hz        | 1920 x 1080 @ 60Hz       |                          |                          |
| Sound (Output)         |                 | 3W x 2                   |                          |                          |                          | 5W x 2                   |
| Dimensions (WxHxD)     | (Without Stand) | 454.7 x 287.7 x 35.4 mm  | 487.8 x 306.5 x 35.6 mm  | 523.9 x 327.7 x 35.7 mm  | 555.7 x 345.6 x 31.6 mm  | 578.6 x 359.1 x 33.2 mm  |
|                        | (With Stand)    | 454.7 x 368.5 x 214.2 mm | 487.8 x 387.3 x 214.2 mm | 523.9 x 413.5 x 239.1 mm | 555.7 x 431.9 x 239.2 mm | 578.6 x 444.6 x 239.2 mm |
| Weight                 | (Without Stand) | 3.1 kg                   | 2.8 kg                   | 3.6 kg                   | 3.6 kg                   | 4.2 kg                   |
|                        | (With Stand)    | 3.4 kg                   | 3.1 kg                   | 4.2 kg                   | 4.2 kg                   | 4.8 kg                   |

| Model Name             |                 | T22A550                  | T23A550                  | T24A550                  | T27A550                  |
|------------------------|-----------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Screen Size (Diagonal) |                 | 21.5 inches (54 cm)      | 23 inches (58 cm)        | 24 inches (61 cm)        | 27 inches (68 cm)        |
| Display Resolution     |                 | 1920 x 1080 @ 60Hz       |                          |                          |                          |
| Sound (Output)         |                 | 3W x 2                   |                          | 5W x 2                   |                          |
| Dimensions (WxHxD)     | (Without Stand) | 525.5 x 329.0 x 34.8 mm  | 559.1 x 348.7 x 31.2 mm  | 581.4 x 360.5 x 32.7 mm  | 648.1 x 398.9 x 31.8 mm  |
|                        | (With Stand)    | 525.5 x 414.4 x 220.6 mm | 559.1 x 433.8 x 220.6 mm | 581.4 x 446.1 x 220.6 mm | 648.1 x 485.7 x 235.0 mm |
| Weight                 | (Without Stand) | 3.6 kg                   | 3.7 kg                   | 4.3 kg                   | 4.7 kg                   |
|                        | (With Stand)    | 4.4 kg                   | 4.4 kg                   | 5 kg                     | 5.6 kg                   |

### NOTE

- Design and specifications are subject to change without prior notice.
- For information about power supply, and more about power consumption, refer to the label attached to the product.
- Some models may not be available for purchase depending on the region.
- If there is no power cut-off switch, the power consumption is "0" only when the power cord is disconnected.
- DPM(Display Power Management) Function does not work if you used in conjunction with the **HDMI IN 1 (DVI)** port of this product.

# Other Information

## Index

### A

|                    |    |
|--------------------|----|
| Accessories        | 11 |
| Advanced Settings  | 27 |
| Amplify            | 29 |
| Antenna            | 15 |
| Anynet+ (HDMI-CEC) | 41 |
| Audio Description  | 29 |
| Auto Adjustment    | 27 |
| Auto Volume        | 30 |

### B

|                  |    |
|------------------|----|
| Background Music | 40 |
| Balance L/R      | 29 |
| Batteries        | 14 |
| Black Tone       | 28 |
| Brightness       | 26 |

### C

|                               |    |
|-------------------------------|----|
| Cable Holder                  | 48 |
| Change PIN                    | 32 |
| Channel List                  | 23 |
| Channel Manager               | 23 |
| Channel Menu                  | 24 |
| Cleaning Related              | 7  |
| Clock                         | 30 |
| Colour Tone                   | 28 |
| Component                     | 17 |
| Connecting to a PC            | 20 |
| Connecting to an Antenna      | 15 |
| Connecting to an Audio Device | 19 |
| Connecting to an AV Device    | 16 |

### D

|                   |    |
|-------------------|----|
| DIGITAL AUDIO OUT | 41 |
| DivX® VOD         | 33 |
| D-sub             | 20 |
| Dynamic           | 25 |
| Dynamic Contrast  | 28 |

### E

|                                  |    |
|----------------------------------|----|
| Edit Name                        | 21 |
| Energy Saving                    | 32 |
| EPG (Electronic Programme Guide) | 22 |
| Equalizer                        | 29 |
| External Speaker                 | 30 |

### F

|            |    |
|------------|----|
| Film Mode  | 28 |
| Fine Tune  | 25 |
| Flesh Tone | 28 |

### H

|              |    |
|--------------|----|
| HDMI         | 41 |
| Headphones   | 19 |
| Home Theatre | 41 |

### I

|                              |    |
|------------------------------|----|
| Installation Space           | 2  |
| Installation Related         | 5  |
| Installing the Device Driver | 45 |

### L

|          |    |
|----------|----|
| Language | 33 |
| Licence  | 52 |

### M

|                   |    |
|-------------------|----|
| Menu Transparency | 33 |
| Music             | 39 |
| My Downloads      | 36 |

### N

|                  |    |
|------------------|----|
| Navigate         | 21 |
| Now & Next guide | 22 |

### O

|                    |    |
|--------------------|----|
| On Timer           | 31 |
| Off Timer          | 32 |
| Optimal resolution | 20 |

### P

|                          |    |
|--------------------------|----|
| Photos                   | 39 |
| Picture Options          | 28 |
| Picture Size             | 26 |
| PIP (Picture in Picture) | 34 |
| Plug & Play              | 15 |
| Power Indicator          | 13 |
| Power Related            | 4  |

### R

|                |    |
|----------------|----|
| Receiver       | 42 |
| Recording      | 43 |
| Remote Control | 14 |
| Repeat Mode    | 40 |
| RGB Only Mode  | 28 |
| Rotate         | 40 |

### S

|                    |    |
|--------------------|----|
| Safety Precautions | 4  |
| Samsung MagicAngle | 26 |
| Select All         | 24 |
| Self Diagnosis     | 34 |
| Sharpness          | 26 |
| Signal Information | 35 |
| Sleep Timer        | 31 |
| Slide Show         | 39 |
| Software Upgrade   | 35 |
| Source             | 21 |
| Speaker Select     | 30 |
| Specifications     | 53 |
| Standby mode       | 13 |
| Subtitle           | 33 |
| Symbol             | 3  |

### T

|                 |    |
|-----------------|----|
| Timer           | 31 |
| Title Search    | 40 |
| TOOLS           | 3  |
| Troubleshooting | 49 |
| TV Speaker      | 30 |

### U

|                        |    |
|------------------------|----|
| USB Drive              | 36 |
| Usage Related          | 7  |
| Using the Channel Menu | 22 |

### V

|               |    |
|---------------|----|
| VCR           | 16 |
| Video Formats | 38 |
| Videos        | 37 |
| Volume        | 31 |

### W

|            |    |
|------------|----|
| Wall Mount | 47 |
| Watch TV   | 22 |
| WEEE       | 52 |

# Contact SAMSUNG WORLDWIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

| Country     | Customer Care Centre ☎   | Web Site   |
|-------------|--|--|
| ALBANIA     | 42 27 5755   | -  |
| AUSTRIA     | 0810 - SAMSUNG (7267864, € 0.07/min)   | www.samsung.com  |
| BELGIUM     | 02-201-24-18   | www.samsung.com/be (Dutch)<br>www.samsung.com/be_fr (French)       |
| BOSNIA      | 05 133 1999  | -  |
| BULGARIA    | 07001 33 11  | www.samsung.com  |
| CROATIA     | 062 SAMSUNG (062 726 7864)   | www.samsung.com  |
| CZECH       | 800 - SAMSUNG (800-726786)   | www.samsung.com  |
| DENMARK     | 70 70 19 70  | www.samsung.com  |
| FINLAND     | 030 - 6227 515   | www.samsung.com  |
| FRANCE      | 01 48 63 00 00   | www.samsung.com  |
| GERMANY     | 01805 - SAMSUNG (726-7864, € 0,14/Min)   | www.samsung.com  |
| GREECE      | 2106293100   | www.samsung.com  |
| HUNGARY     | 06-80-SAMSUNG (726-7864)   | www.samsung.com  |
| ITALIA      | 800-SAMSUNG (726-7864)   | www.samsung.com  |
| KOSOVO      | +381 0113216899  | -  |
| LUXEMBURG   | 261 03 710   | www.samsung.com  |
| MACEDONIA   | 023 207 777  | -  |
| MONTENEGRO  | 020 405 888  | -  |
| NETHERLANDS | 0900-SAMSUNG (0900-7267864) ( € 0,10/Min)  | www.samsung.com  |
| NORWAY      | 815-56 480   | www.samsung.com  |
| POLAND      | 0 801 1SAMSUNG (172678), 022-607-93-33   | www.samsung.com  |
| PORTUGAL    | 80820 - SAMSUNG (726-7864)   | www.samsung.com  |
| ROMANIA     | 08010 SAMSUNG (08010 7267864) – doar din rețeaua Romtelecom, tarif local;<br>021.206.01.10 – din orice rețea, tarif normal | www.samsung.com  |
| SERBIA      | 0700 SAMSUNG (0700 726 7864)   | www.samsung.com  |
| SLOVAKIA    | 0800 - SAMSUNG (0800-726 786)  | www.samsung.com/sk   |
| SPAIN       | 902 - 1 - SAMSUNG (902 172 678)  | www.samsung.com  |
| SWEDEN      | 0771 726 7864 (SAMSUNG)  | www.samsung.com  |
| SWITZERLAND | 0848 - SAMSUNG (7267864, CHF 0.08/min)   | http://www.samsung.com/ch<br>http://www.samsung.com/ch_fr (French) |
| U.K         | 0330 SAMSUNG (7267864)   | www.samsung.com  |
| EIRE        | 0818 717100  | www.samsung.com  |
| LITHUANIA   | 8-800-77777  | www.samsung.com  |
| LATVIA      | 8000-7267  | www.samsung.com  |
| ESTONIA     | 800-7267   | www.samsung.com  |
| TURKEY      | 444 77 11  | www.samsung.com  |
| RUSSIA      | 8-800-555-55-55  | www.samsung.com  |
| GEORGIA     | 8-800-555-555  | -  |
| ARMENIA     | 0-800-05-555   | -  |
| AZERBAIJAN  | 088-55-55-555  | -  |
| KAZAKHSTAN  | 8-10-800-500-55-500 (GSM: 7799)  | www.samsung.com  |
| UZBEKISTAN  | 8-10-800-500-55-500  | www.samsung.com  |
| KYRGYZSTAN  | 00-800-500-55-500  | www.samsung.com  |
| TADJIKISTAN | 8-10-800-500-55-500  | www.samsung.com  |
| UKRAINE     | 0-800-502-000  | www.samsung.com/ua<br>www.samsung.com/ua_ru                        |
| BELARUS     | 810-800-500-55-500   | -  |
| MOLDOVA     | 00-800-500-55-500  | -  |